

! ATTENTION INSTALLER !

The following list describes errors/inconsistencies found in the Avital Model 5303L Installation Guide N5303L 2008-07:

Installation Guide

| Page | Description/error | Correction | | | | | | | | | | | | | | | | | | |
|--------------|---|--|----|--------------------|---|----|------------------------|---------------------------------------|----|--------------------|---|----|------------------------|---------------------------------------|----|--------------------|---|----|------------------------|--------------------------------------|
| inside cover | Error is found in the Bitwriter® chip version requirement: version 2.5 | The Bitwriter (p/n 998U) requires chip version 2.6 or newer to program this unit. | | | | | | | | | | | | | | | | | | |
| 41 | Error is found in Menu 1 - Basic, 14: One-chirp setting - Comfort Closure ON Two-chirp setting Comfort Closure OFF 3) Comfort Closure (2) | One-chirp setting - Comfort Closure 1 ON Two-chirp setting Comfort Closure OFF (2), Comfort Closure (3) (* indicates the number of LED flashes. | | | | | | | | | | | | | | | | | | |
| 42 | Error is found in Menu 2 - Advanced, # 9: | The One-chirp setting Factory disarm with trunk release , is programmed ON, the default. Two-chirp setting is programmed OFF. | | | | | | | | | | | | | | | | | | |
| 42 | Errors are found in Menu 2 - Advanced, #12 -17: | <table border="1" style="width: 100%; border-collapse: collapse;"> <tbody> <tr> <td style="width: 5%;">12</td> <td style="width: 60%;">Aux 1 validity (1)</td> <td style="width: 35%;">Latched (2), Latch reset with ignition (3), 30-secs timed (4), 60-secs (5), 90-secs (6)</td> </tr> <tr> <td>13</td> <td>Aux 1 Linking None (1)</td> <td>Arm (2), Disarm (3), Remote Start (4)</td> </tr> <tr> <td>14</td> <td>Aux 2 validity (1)</td> <td>Latched (2), Latch reset with ignition (3), 30-sec. timed (4)</td> </tr> <tr> <td>15</td> <td>Aux 2 linking None (1)</td> <td>Arm (2), Disarm (3), Remote Start (4)</td> </tr> <tr> <td>16</td> <td>Aux 3 validity (1)</td> <td>Latched (2), Latch reset with ignition (3), 30-sec. timed (4)</td> </tr> <tr> <td>17</td> <td>Aux 3 linking None (1)</td> <td>Arm (2).Disarm (3), Remote Start (4)</td> </tr> </tbody> </table> | 12 | Aux 1 validity (1) | Latched (2), Latch reset with ignition (3), 30-secs timed (4), 60-secs (5), 90-secs (6) | 13 | Aux 1 Linking None (1) | Arm (2), Disarm (3), Remote Start (4) | 14 | Aux 2 validity (1) | Latched (2), Latch reset with ignition (3), 30-sec. timed (4) | 15 | Aux 2 linking None (1) | Arm (2), Disarm (3), Remote Start (4) | 16 | Aux 3 validity (1) | Latched (2), Latch reset with ignition (3), 30-sec. timed (4) | 17 | Aux 3 linking None (1) | Arm (2).Disarm (3), Remote Start (4) |
| 12 | Aux 1 validity (1) | Latched (2), Latch reset with ignition (3), 30-secs timed (4), 60-secs (5), 90-secs (6) | | | | | | | | | | | | | | | | | | |
| 13 | Aux 1 Linking None (1) | Arm (2), Disarm (3), Remote Start (4) | | | | | | | | | | | | | | | | | | |
| 14 | Aux 2 validity (1) | Latched (2), Latch reset with ignition (3), 30-sec. timed (4) | | | | | | | | | | | | | | | | | | |
| 15 | Aux 2 linking None (1) | Arm (2), Disarm (3), Remote Start (4) | | | | | | | | | | | | | | | | | | |
| 16 | Aux 3 validity (1) | Latched (2), Latch reset with ignition (3), 30-sec. timed (4) | | | | | | | | | | | | | | | | | | |
| 17 | Aux 3 linking None (1) | Arm (2).Disarm (3), Remote Start (4) | | | | | | | | | | | | | | | | | | |
| 43 | Error is found in Menu 3 - Remote start, #3: | One-chirp setting, Parking light output: Constant Two-chirp setting, Flashing. | | | | | | | | | | | | | | | | | | |
| 49 | Error is found in Menu 2 Advanced Features descriptions. 2-12 2-14 2-16 | 2-12 - AUX 1 VALIDITY/LATCHED/LATCHED RESET WITH IGNITION/30, 60 and 90 SEC TIMED OUTPUT 2-14 - AUX 2 VALIDITY/LATCHED/LATCHED RESET WITH IGNITION/30,60 and 90 SEC TIMED OUTPUT 2-16 - AUX 3 VALIDITY/LATCHED/LATCHED RESET WITH IGNITION/30, 60 and 90 SEC TIMED OUTPUT | | | | | | | | | | | | | | | | | | |
| 51 | Error is found in Menu 3 - Remote start Feature description: 3-10 DIESEL TIMER - WAIT-TO-START | 3-10 DIESEL TIMER - WAIT-TO-START (default) | | | | | | | | | | | | | | | | | | |