

Quick Reference Install Guide

Viper SmartStart Module VSM100



Installation Procedure

This product is compatible with the following models of Directed Electronics Security and/or Remote Start systems:

- Viper 5902
- Viper 5901
- Viper 5701
- Viper 5601
- Viper 5501
- Viper 5301
- Viper 5101

Please read the following before proceeding

1. Customer Information required:


- Record the customer information requested in step 5a of this procedure. The module ID # is provided on a sticker which can be affixed to the space provided in step 5a.
- Is this a new account or one being added to an existing account? Check box(es) in 5a. This information is required for final verification/activation of the VSM100.

2. Installation Points:

- Install and test the security/remote start system first using the associated guides and wiring diagram. If using an existing system, verify it is fully functional before installing the Viper SmartStart module.
- Mount the SmartStart module as high as possible in the vehicle (side with Directed label down). Mount with minimal obstructions that can affect communications and within reach of the main Directed system using the provided cables (do not extend).
- DO NOT connect the SmartStart module until the final programming of the Remote Start main unit and verification of security/remote start system operations are completed.

3. Install the VSM100 using the information in the following wiring diagram and steps.

- a. Complete the main power connections.

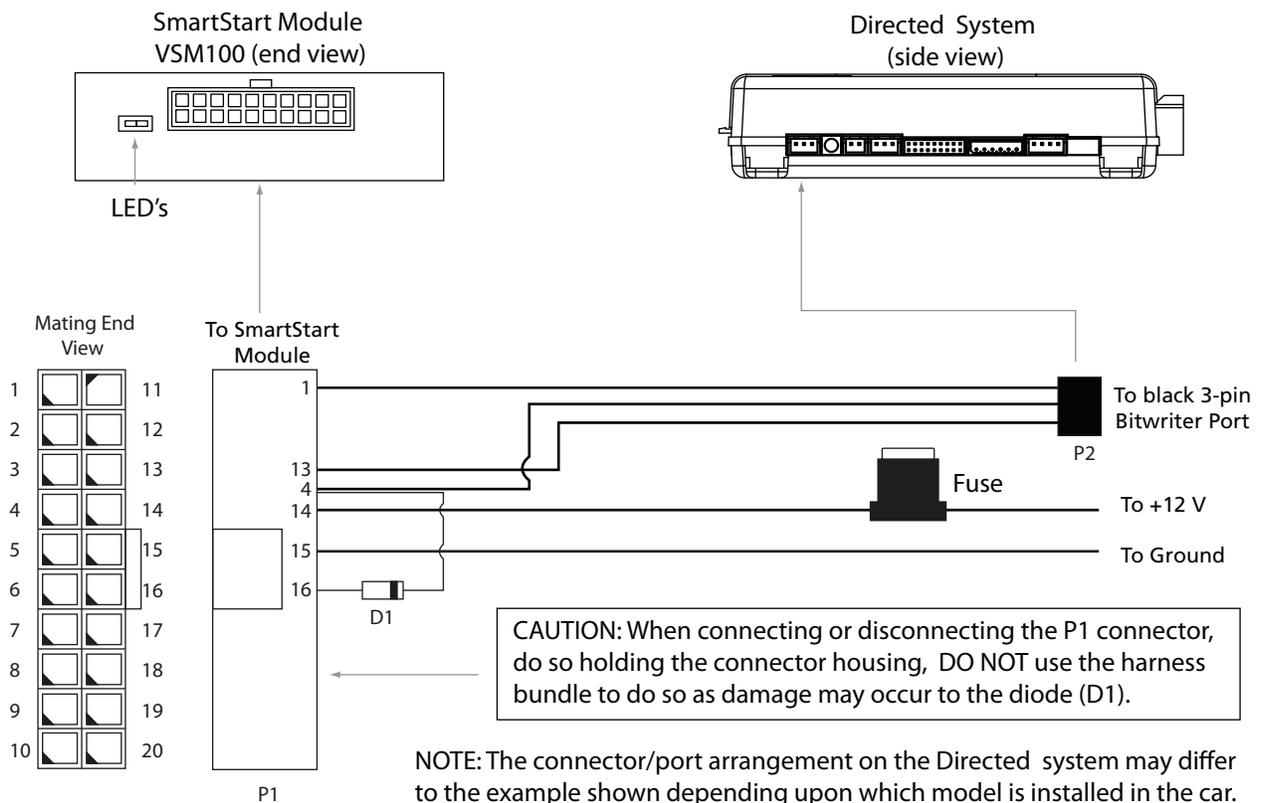

- b. Plug the three wire cable (P2) into the black 3-pin Bitwriter port of the Directed system.

CAUTION: Be careful NOT to plug this P2 connector into the white Door Lock port which also accepts an identical 3-pin connector. Electrical damage will occur if plugged into this port.

- c. Plug connector P1 into the SmartStart module.
 - d. When power is connected, the module begins an initialization procedure that may take several minutes. During this procedure, progress is reported via the flashing Amber/Green LED's next to the P1 connector. When both LED's turn on solid, the initialization procedure is completed (See *Status LED's* for a description of the various LED states).
4. Re-verify security/remote start system operation: Perform all basic operations such as Lock, Unlock, Panic and Remote Start, (Trunk release where applicable) using the supplied remote control. If the system operates as expected proceed to the next step (5). If the system does not operate as expected, rectify the problem first.
5. Verify and Activate the VSM100: The following information and steps need to be performed for the Verification/Activation of the VSM100 Viper SmartStart module.

a. Customer Information:

Customer's Full Name:

Customer's Email Address:

Record/place Module ID # here:

New Account: Existing Account:

If this is an existing account, are you:

adding a new system:

or replacing an existing one:

- b. Log on to:
www.viper.com/SmartStart/activate.
- c. Enter customer information and module ID #
- d. Click onscreen prompt to activate your system.
- e. Select whether you are activating the first SmartStart system for the customer (New Account) or adding a SmartStart system for a customer with an existing account (Add a Vehicle).
- f. Activate module.
- g. Test the SmartStart system from the website using the supplied function links.
- h. Print the customer information which includes their temporary password. The customer is also automatically notified via email, which contains their temporary password and a link they can click through to finish setting up their account.

Note: SmartStart response time can vary depending on cellular coverage and network congestion.

Status LED's

Amber LED states:

- Off: No cellular/Wi-Fi communication. Check connections such as module harness P1 (including D1).
- Flashing slowly: The module is seeking cellular or Wi-Fi system communication. If no cell or Wi-Fi coverage is available the Amber LED will continue to flash slowly, move the vehicle to a location with better reception.
- Flashing quickly: The module is negotiating with a cellular or Wi-Fi system.
- On solid: Communication successfully established.

Green LED states:

- Off: Communication not established with the remote start main unit. Check connection at the Bitwriter port, once connected properly the LED will turn on.
- Flashing: Active communication in progress between the SmartStart module and Remote Start main unit.
- On solid: Communication successfully established with the remote start main unit.

Please return this guide and printout from step 5h to the owner after successfully completing the installation as it contains details required for account setup.

Additional information can be found at: www.directechs.com

