





AUTOSTART



RF system Quick Start User Guide

Thank you for purchasing this Autostart product. This Quick Start User Guide contains what you need to get started. Full user guide is available at www.autostart.ca/Downloads.aspx.


USING YOUR REMOTE CONTROL (ASRS-1554 / ASRS-3520 / ASRS-7505)

	Locks the doors and arms the system (if configured).
	Unlocks the doors and disarms the system (if configured).
	Opens the trunk if button is pressed for more than 4 seconds.
	Remote starts/stops the engine.
<i>f</i>	Access to various advance features of the remote and the remote starter. (For more details, refer to the full owner's guide).

USING YOUR REMOTE CONTROL (ASRS-1110 / ASRS-2110)


	Remote starts the engine. If the engine is running during remote start, the doors will unlock.
 & hold for more than 2 secs.	While the engine is running during remote start, holding this button will remote stop the engine.

REMOTE STARTING YOUR VEHICLE

Press and release the  button. If you have a 2-way system, the remote will play a start melody after the start command is sent. This is to provide confirmation that the system will perform a remote start.

IDLE MODE (EXCLUSIVELY FOR RF KITS AS-RFS1554 / AS-RFS3520 / AS-RFS7505)

This convenient feature allows you to keep the engine running and the doors locked during a quick stop at convenience store or for any other applicable usage.

STEPS		STATUS
1	With the engine running, ensure that the gear is in "P" or neutral position.	
2	Press and release the  button.	The parking lights will flash once then remain ON.
3	Remove the key and exit the vehicle. Lock the doors with your remote.	The engine will continue running while the car is locked for the pre-programmed runtime.