

User Guide

A note concerning the battery inside the transmitter:

Depending on the usage of the transmitter, the battery can last anywhere between 3 to 6 months. When the battery is low, the transmitter will emit two beeps in a repetitive cycle. At that point you should replace the battery with a new one. That is why we recommend that you keep a spare battery somewhere handy such as the glove compartment.

INDUSTRY CANADA USER NOTICE:

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that required for successful communication.

FCC USER NOTICE (U.S.A.):

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Table of Contents

Table of Contents	2	Home Valet™	9
Introduction	2	Ignition-controlled Door Locks	9
Remote-Starting Your Vehicle	3	Ignition Re-lock.....	9
Remote-starting	3	Secure Lock	9
Vehicle Presets	3	Turbo Mode	10
Driving Off	3	Remote Trunk Release	10
Using the System.....	4	Engine Run Time.....	10
Arming and Disarming the System....	4	Multi-car Operation.....	10
Idle Mode.....	5	Missing a Start or a Stop Confirmation .	11
Turbo Mode	5	L.E.D. Intrusion Codes.....	12
Valet Mode with the Valet Switch	5	Troubleshooting Poor Transmitting	
Ignition Valet.....	6	Range	12
Start Attempts Indicator (Valet		Using the Remote Control	13
Mode)	6	LCD Transmitter Operation (<i>First Car</i>	
“Home Valet™” Mode	6	<i>Control</i>)	14
Remote Valet Mode.....	6	Basic Vehicle Operation	14
Panic Mode	7	Transmitter Mode Selection	14
Quick Lockout™	7	Time or Alarm Clock Adjustments ...	14
Cold Weather Mode	7	Cold Weather Mode	15
Temporary Chirp Delete	8	Home Valet™	15
Advanced Features: Installation-		Parking Countdown	15
programmable Options	8	Safe Start Mode	15
Remote Door Locks.....	8	*Runtime (<i>Cannot be programmed.</i>	
Priority Door Access.....	8	<i>Serves as indication only.</i>)	16
Active or Passive Arming	8	LCD Transmitter Operation (<i>Second</i>	
The Starter Kill and the Anti-grind		<i>Car Control</i>)	16
Feature	8	Basic Vehicle Operation	16
Shock Sense, Warn-away Sense.....	8	Start and Stop While in Safe Start	
Disarmed Notification	9	Mode	16
Siren or Horn Chirps.....	9	Diagnostics – Chirps Table	17
Car Finder	9	Diagnostics – Parking Light Flash	
Siren or Horn Chirp Timing.....	9	Table.....	17
Safe Start	9		

Introduction

This System is a state-of-the-art remote car starter and alarm combo system. The system is packed with advanced features such as priority access to the driver's door and Car Finder (commodity features), last armed state memory in case of power failure (which ensures that the vehicle remains protected after a power failure recovery) and the Safe Start children safety feature.

With many advanced functions, this product will satisfy any one your expectations from high-end commodity and security systems, without neglecting any standard feature commonly offered by entry-level starters.

Remote-Starting Your Vehicle

Remote-starting

Press the **START/STOP** button for **approx. 1 second**. The parking lights will come **ON** and the remote control will play a melody to inform you that the System has received your signal. Approximately 5 seconds later, the engine will start. The parking lights will remain **ON** during the pre-programmed run time of the engine.

If the vehicle does not start at the first attempt, the system will shut down, wait a few seconds and try to start the engine again. There will be 3 start attempts before the system gives up.

Vehicle Presets

Heater & Heated Seat

When leaving the vehicle it is recommended to preset the accessory controls in preparation for the next remote start. Settings for the blower motor (fan), front and rear, as well as heated seats (if equipped) should not be left on **HIGH**. It is recommended to leave the settings on **LOW** or **MEDIUM** instead.

Windshield Wipers & Radio & Headlights

Certain vehicles require the radio and / or windshield wiper and / or headlight circuits to become energized while running under remote start. When leaving the vehicle you must ensure that the windshield wiper and headlight switches are **OFF**. Leaving the headlight switch **ON** on certain types of vehicles could cause them to remain **ON** even after remote starter shut down, resulting in a dead battery.

Driving Off

With the vehicle running under remote control, press the **UNLOCK** button to disarm and unlock the doors. Enter the vehicle and do the following:

Turn the ignition key to the **IGNITION ON (RUN)** position. (**Do not turn the key** to the **CRANK** position while the engine is running. This would cause the starter motor to re-engage.)

Press the brake pedal to disengage the remote starter unit.

You are now ready to drive off.

Basic Vehicle Operation

The vehicle can be remote-started and stopped using the **START/STOP** () button. The **TRUNK** () button will open the trunk (if this feature is installed on the vehicle). The **LOCK** () and **UNLOCK** () buttons will lock and unlock the doors of the vehicle (if the remote door lock feature is installed on the vehicle) and arm or disarm the starter kill (if installed). The **FUNCTION** () button is used to access all advanced functions of the remote control. The **AUXILIARY** button () is used to activate AUX 2 or to Stop the engine (if programmed as the Stop button). (Refer to the LCD Transmitter Operation tables.)

Alarm Clock

The LCD remote control has a built-in alarm clock that can be set up using the  button. Use the  and  buttons to switch the alarm clock on and off (refer to the tables).

Time Adjust Mode

Use Time Adjust Mode to set the current time on your remote control using the  button (refer to the tables).

Countdown Timer

This feature allows set up of a countdown for a duration entered by the user in hours and minutes using the  button (refer to the tables).

Parking Countdown

This version of the countdown feature is particularly useful for keeping track of parking meter time: the user may quickly set up the countdown in slices of 10 or 30 minutes using the  and  buttons (refer to the tables).

Melody Selection

The remote control allows the user to select which melodies are to be used upon the following events: remote starting of the vehicle, the alarm, ending of the countdown, and entering Cold Weather Mode. Melodies for these various events can be selected using the  button (refer to the tables).

Vibration Mode

Use this feature to replace audible signals with a vibration signal. Use the  and  buttons to switch Vibration Mode "ON" and "OFF" (refer to the tables).

Power Saving Mode

When set to Power Saving Mode, the remote control will cease polling the remote starter module on a regular basis for status information. This will extend battery life. Press the  button. Then use the  and  buttons to switch Power Saving Mode "ON" and "OFF" (refer to the tables).

Remote Control Finder

This function allows the user to locate the remote control when it has been accidentally dropped near the vehicle. Pressing the valet button and holding it down for 5 seconds (or until the parking lights flash five times) will cause the remote control to start beeping for one minute. The beeping will stop by itself after one minute, or it can be switched off by pressing the LOCK () or the UNLOCK () button on the Remote Control.

Using the System

Arming and Disarming the System

To disarm the alarm and Starter Kill (if installed) and unlock the doors (if installed):

1. Press and hold the UNLOCK button for approx. 1 sec.

You will hear **two chirps** if the Siren or Horn is so configured.

The icon will light up on the LCD display of the remote control. The parking lights will **flash twice** and the L.E.D. will go out to confirm that the doors have been unlocked and that the Starter Kill (if installed) and the alarm are disarmed.

In Passive Mode, the System will rearm automatically 30 seconds after unlocking unless the key is inserted in the ignition switch (see description of **Passive Mode** later in this Guide).

To arm the alarm and Starter Kill (if installed) and lock the doors (if installed):

1. Press and hold the LOCK button for approx. 1 sec.

You will hear **one chirp** if the Siren or Horn is so configured.

2. The icon will light up on the LCD display of the remote control. The parking lights will **flash once** and the L.E.D. will flash slowly to confirm that the doors have been locked and that the Starter Kill feature (if installed) and the alarm are armed.

Idle Mode

Convenience feature: Idle Mode allows you to keep the engine running and the doors locked while you stop, for example, at a convenience store or for a short delivery.

This feature allows you to let the remote starter take over control of the vehicle (i.e. no Key in the Ignition Switch) while the engine is running. For example, if you stop for a delivery or at a convenience store, lock your vehicle and leave it running for the length of a run cycle while you are away.

To leave the vehicle in Idle Mode:

1. With the engine running, press the **LOCK** or **UNLOCK** button (to unlock the doors) or the **START/STOP** button on the remote control until the parking lights come on.

Remove the key and exit the vehicle. The engine will go on running.

Lock the doors if needed.

The engine will go on running until the user re-enters the vehicle or until the expiration of the Engine Run Time.

Caution!!! Do not leave children or pets unattended in a vehicle standing in Idle Mode.

Turbo Mode

If Turbo Mode is configured at installation, it will allow a turbocharger to idle down after the user leaves the vehicle: the unit will take over the vehicle and keep it running for 60 seconds (or until it is shut down by remote control), then shut down the engine.

Proceed as follows to set the system to Turbo Mode:

1. With the engine already running, press the **LOCK** button on the transmitter until the parking lights come **ON**.

Remove the ignition key from the ignition switch. **The engine will go on running.**

Exit the vehicle and close the door.

Press the TRUNK button to lock the doors; the engine will shut down after 60 seconds of Turbo Mode.

Valet Mode with the Valet Switch

When your vehicle is in Valet Mode, the remote starter functionalities are disabled. If the vehicle needs to be serviced, or if you park it indoors, the Valet Mode will prevent the engine from being remote-started accidentally.

To put the system into Valet Mode:

1. Turn the ignition key to the **IGNITION ON (RUN)** position.
2. Within 3 sec., press the valet button (the parking lights will flash 3 times and the L.E.D. will come **ON** solid).

— The Transmitter will display the  icon.

To take the system out of Valet Mode:

1. Turn the ignition key to the **IGNITION ON (RUN)** position.
2. Within 3 sec., press and release the valet button (the parking lights will flash twice and the L.E.D. will come **OUT**).

— The  icon will disappear from the Transmitter.

Note: Once Valet Mode is activated, the remote starter and alarm functions will be disabled.

Ignition Valet

This feature will allow you to remotely put your system into Valet Mode by using the ignition key instead of the Valet button as above. Ignition Valet can be used without a Valet button installed.

To put the system i n t o Ignition Valet Mode:

Insert the ignition key into the ignition switch. Within 10 sec.,
turn the key 5 times successively into the **IGNITION ON / RUN** and **OFF** positions.
The parking lights will flash three times to indicate that the vehicle is now in Valet Mode.
The L.E.D. will come **ON** solid.
The Transmitter will display the  icon; the LED will remain on solid.

To take the system o u t o f Ignition Valet Mode:

Insert the ignition key into the ignition switch. Within 10 sec.,
turn the key 5 times successively into the **IGNITION ON / RUN** and **OFF** positions.
The parking lights will flash twice to indicate that the vehicle is now out of Valet Mode.
The L.E.D. will go out.
The  icon will disappear from the Transmitter; the LED will turn off.

Note: With the Ignition Valet activated, the remote starter and alarm functions will be disabled.

Start Attempts Indicator (Valet Mode)

This reveals start attempts made while the vehicle was in **Valet Mode**. The parking lights will:

Come **ON**, go **OUT**; then
Flash **twice**.

“Home Valet™” Mode

If configured at installation, this feature will remotely set the vehicle to a no-remote-start mode: if the vehicle is parked indoors there is no danger of it starting accidentally by remote control.

Note: Once the Home Valet Mode is activated, the vehicle will not start by remote but the alarm functions will still be active.

To take the system i n t o Home Valet Mode:

Press the **LOCK** or **UNLOCK** button.
Within 5 seconds, press the **Lock** and **START/STOP** button simultaneously.
The Transmitter will BEEP once and will display the  icon.

To take the system o u t o f Home Valet Mode:

Turn the ignition key to the **IGNITION ON (RUN)** position.
The Transmitter will BEEP once and the  icon will disappear.

The system will warn you if someone attempts to start your vehicle while it stands in Home Valet Mode. The parking lights will:

Go **ON** then **OFF**; then
Flash **twice**, pause; then
Flash **twice** again.

Remote Valet Mode

This feature will allow you to remotely put your system into Valet Mode by using the transmitter instead of the Valet button as above.

Getting i n t o Remote Valet Mode

- Hold the **UNLOCK** and **START/STOP** buttons simultaneously for 3 seconds.
- **The Parking Lights will flash 3 times.**

The Transmitter will BEEP once and will display the  icon; the LED will remain on solid.

Getting o u t of Remote Valet Mode

- Hold the UNLOCK and START/STOP buttons simultaneously for 3 seconds.
- The Parking Lights will flash 2 times.

The Transmitter will BEEP once and the  icon will disappear; the LED will turn off.

Note:

With the Remote Valet activated, the remote starter function will be disabled.

Panic Mode

In an emergency situation, you can activate Panic Mode using the LOCK or UNLOCK button. This will:

- shut down the engine,
- unlock the doors (with the UNLOCK button)
- or lock the doors (with the LOCK button),
- disarm the Starter Kill and
- activate the siren for 1 minute.

Note: See the description of the **starter kill** option later in this guide.

To activate panic mode:

Press and hold the UNLOCK button for approximately 3 sec. until the sound signal starts and the parking lights flash: this will unlock the doors before the sound signal starts.

Or press and hold the LOCK button for approximately 3 seconds until the sound signal starts and the parking lights flash: this will lock the doors before the sound signal starts.

If the panic mode is triggered while the system is armed in Passive mode, the alarm will sound for 30 seconds. If the system is armed in Active mode, the alarm will sound for 1 minute.

Note: To stop Panic Mode before the end of its delay, press the LOCK or UNLOCK button until the sound signal stops.

Quick Lockout™

(Also called **Secure Panic.**) For fast protection in emergency situations, the system will LOCK all doors when you **press the brake pedal while you hear the sound signal.** (Quick Lockout is only available when **panic mode** has been set off.)

Cold Weather Mode

When cold weather mode is active, the engine starts every 2 hours and runs for 4 minutes (or for 9 or 20 minutes with diesel engines). Cold weather mode automatically ends after 24 hours.

To enter cold weather mode:

Press and release the FUNCTION button until you hear a beep. Release the FUNCTION button,  will appear, then press and hold the START/STOP button for 3 seconds until the parking lights flash three times.

The remote control will beep once and the  icon will appear on the display.

To exit cold weather mode, do any one of the following actions:

Open the hood.

Start the engine by remote.

Turn the ignition key to the IGNITION ON (RUN) position.

Press the FUNCTION button until you hear a beep. Release the FUNCTION button and  will appear on the display. Then press the START/STOP button for 3 seconds (the parking lights will flash once).

When the system exits cold weather mode, the remote control will beep once and the  icon will disappear from the display.

To verify whether the system is in cold weather mode:

Press and release the brake pedal:

If the vehicle is in cold weather mode, the parking lights will stay on while the pedal is pressed.

Temporary Chirp Delete

To temporarily disable the chirp confirmations of the siren upon arming and disarming (e.g. in a quiet neighbourhood):

1. Press the **TRUNK** button.
2. Within 3 sec., press the **LOCK** or **UNLOCK** button to arm or disarm without any chirps.

Advanced Features: Installation-programmable Options

The System was designed with flexibility and OEM integration in mind. With its programmable options, this unit can single-handedly control nearly any electrical system in your vehicle.

Caution: The programming of your system should be left to a professional. Changing any one of the settings may affect the operation of your System.

The installation-programmable options are as follows:

Remote Door Locks	Home Valet™
Priority Door Access	Ignition-controlled Door Locks
Passive or Active Arming	Ignition Re-lock
Starter Kill / Anti-grind feature	Relock
Shock Sense and Warn-away	Secure Lock
Disarmed Notification	Turbo Mode
Siren / Horn Chirps	Remote Trunk Release
Car Finder	Engine Run Time
Siren / Horn Chirp Timing	Separate Start and Stop buttons.
Safe Start	Multi-car Operation

Remote Door Locks

If your System was installed with the Remote Door Locks option, you will have the convenience of remote keyless entry. See section **Arming and Disarming the System**, earlier in this Guide, for further instructions on remote door locking and unlocking.

Priority Door Access

(Enabled by default.) If the Remote Door Locks option is installed on your vehicle, this safety feature allows you unlock solely the driver's door with a single press of the **UNLOCK** button on the transmitter; upon a second press of the **UNLOCK** button, all the other doors will unlock.

Active or Passive Arming

(Passive Mode by default.) The alarm and Starter Kill can be configured either to Passive Mode (so as to arm automatically) or Active Mode (so as to require user intervention for arming). By default, your System is configured to **Passive Mode**. In Passive Mode, the alarm and Starter Kill will automatically arm **30 seconds** after the last door is closed. The System will not arm if a door is left open, or if you re-open a door within the 30-second delay.

Important note: When the System re-arms automatically or if there is an alarm condition, you can disarm the System by simply pressing the **UNLOCK** button.

The Starter Kill and the Anti-grind Feature

With this added security feature, the system will prevent your vehicle from starting with the ignition key when the Starter Kill is armed. If your System was installed with the Starter Kill option, one will not be able to start your vehicle with the key unless the system has been unlocked and disarmed first, or put into Valet Mode.

Note: If the Starter Kill is installed, your vehicle will benefit from a protection against starter motor damage that could occur after remote-starting the engine should the user, by force of habit, turn the ignition key to the **CRANK** position.

Shock Sense, Warn-away Sense

(Both enabled by default.) Your System will react to a full shock by triggering the alarm; it can also respond to a lighter shock (30 % of the strength of a full shock) by giving a **warn-away** (without triggering an alarm condition).

Note: After a remote start, although the shock sensor is disabled, all the other alarm-triggering zones, such as the doors, the trunk or the hood, may still trigger an alarm.

Disarmed Notification

(Off by default.) This feature will notify the user when the vehicle was left disarmed: after the engine is shut down (with the key removed) and all doors are closed, the siren will chirp once after a 10-sec. notification delay to warn the user that the vehicle was left unprotected. The notification can be avoided by pressing the **LOCK** or **UNLOCK** button on the transmitter. The user will likewise be notified after the System is disarmed using the transmitter.

Siren or Horn Chirps

(**ON** by default.) The siren will chirp to confirm basic operations on the System:

By default, upon **locking** the doors the siren will give **one chirp** if no protection zone is active.

If a **zone is active** as the doors are being **locked**, the siren will give **three chirps**.

When the doors are being **unlocked**, the siren will give **two chirps** if no intrusion was detected.

If an **intrusion was detected**, as the doors are being **unlocked** the siren will give **four chirps**.

The system can alternatively be set to:

Warning Mode: no chirp during lock/unlock...

unless a zone is active when locking, in which case there will be 3 chirp upon locking
or unless the alarm was triggered, in which case there will be 4 chirps when unlocking);

Open Zone Notification Mode: 3 warning chirps if a door is left open 10 sec. after arming.

No Chirp: the siren will not chirp under any circumstance.

Car Finder

(Enabled by default.) When enabled, the Car Finder option will help you locate your vehicle by generating a pulsating signal through the horn or the siren. To hear the signal, press **FUNCTION** then **LOCK**.

Siren or Horn Chirp Timing

The duration of the chirps can be adjusted at installation (from 5 to 200 ms).

Safe Start

(Disabled by default.) If this feature is enabled, the user must press the **START/STOP** button 2 times within 3 seconds to remote-start the vehicle. This will eliminate accidental remote starts, e.g. when children are playing with the transmitter.

If **Swap Start Mode** is selected, to remote-start your vehicle press **FUNCTION** followed by the **LOCK** button. The **AUX 2** output can be activated by pressing the **START/STOP** button.

Home Valet™

(Disabled by default.) If this feature is installed, the user will have the possibility to remotely set the vehicle to a no-remote-start mode. See **Home Valet** section, earlier in this Guide, for full instructions.

Ignition-controlled Door Locks

(Disabled by default.) This is an added security feature. If your Systems was installed with the Ignition-Controlled Door Locks option, the doors will automatically be locked as soon as the ignition key is turned to the **IGNITION ON (RUN)** position while the brakes are pressed. When the key is turned to the **OFF** position, the doors will automatically be unlocked.

Ignition Re-lock

On Systems of this series, when Ignition-controlled Door Locks are enabled and the ignition key is in the **IGNITION ON (RUN)** position, should any door be unlocked and opened, all doors will be relocked next time the brake pedal is pressed.

Relock

If you unlock the doors with the remote transmitter, but do not open any doors, hood or trunk, or turn ignition within 30 seconds, the doors will automatically relock and rearm the system.

Note: When the system is in **active arming** mode and the **relock** mode is enabled, the doors will relock but the system will not rearm.

Secure Lock

(Disabled by default.) Before it can remote-start your vehicle, the System must first disarm the factory security system. The Secure Lock feature may be required on certain vehicle models with factory security systems that automatically unlock the doors when the security system is disarmed. To keep your vehicle protected when the factory security system is disarmed for a remote start, Secure Lock will relock your doors as soon as the vehicle has started. Once the engine run cycle ends, Secure Lock will rearm your factory security system.

Turbo Mode

(Enabled by default.) When left in Turbo Mode, the System will keep the engine running for 60 seconds before shutting it down. This is to allow a turbocharger to idle down after the user leaves the vehicle. See **Turbo Mode** section earlier in this Guide.

Remote Trunk Release

If your system was installed with the Remote Trunk Release option, you can open your trunk by pressing the **TRUNK** button for 3 seconds on the remote transmitter or by pressing the **TRUNK** button **TWICE** within 3 seconds.

Engine Run Time

(15/20 minutes by default.) If you have a gas engine, your System can be programmed to run the engine for 4, 15, or 25 minutes (15 minutes by default). If you have a diesel engine, the System can be programmed to run the engine for 9, 20, or 30 minutes (20 minutes default).

Separate Start and Stop buttons

The Auxiliary button [] can be programmed as the Stop button – Mode 4, Function 3, Option 1

Temperature Request (If ACC-Temp-100 installed)

The user can request the temperature in the vehicle if a Temperature Sensor Module (ACC-Temp-100) is installed:

- o Press and hold the [F] button for 3 seconds until there is 1 beep – release the button
- o Press and hold the [TRUNK] button (TRUNK button) approx. 1 second or until there is 1 beep – release the button
- o The temperature will be displayed on the LCD screen

Note: to change the from Celsius to Fahrenheit, press [F] + [C/F] + [lightning bolt] simultaneously

Multi-car Operation

This option allows the owner of two vehicles, both equipped with the same system, to control both systems with a single remote control. To control the second vehicle:

Press **TRUNK + LOCK** buttons simultaneously:..... **LOCK**
Press **TRUNK + UNLOCK** simultaneously:..... **UNLOCK**
Press **TRUNK + START/STOP** simultaneously:..... **START**
Press **TRUNK + START/STOP** simultaneously:..... **STOP**
Press **SHIFT > SHIFT > TRUNK**: **TRUNK**

Or

Press **SHIFT > SHIFT > + LOCK**:..... **LOCK**
Press **SHIFT > SHIFT > + UNLOCK**:..... **UNLOCK**
Press **SHIFT > SHIFT > + START/STOP**:..... **START**
Press **SHIFT > SHIFT > + START/STOP**:..... **STOP**
Press **SHIFT > SHIFT > + TRUNK**:..... **TRUNK**

In order to access the 2nd car operations with the companion remote, Shift button must be pressed twice quickly and then one more time followed by **LOCK, UNLOCK, TRUNK** or **START/STOP**.

Note: Your remote control must be configured for second car operation by the installer.

Missing a Start or a Stop Confirmation

If you have not received a start or the stop confirmation after pressing the **START/STOP** button, simply press the **LOCK** button. Pressing the **LOCK** button will refresh the display and will confirm if the vehicle was started or stopped.

The Start Confirmation Was Not Received

If after remote starting the vehicle no confirmation was received, simply press the **LOCK** button, this will refresh the display. If the vehicle was started successfully, the smoke icon and the hourglass icon will appear as well as the run time countdown. Pressing the **LOCK** button will also lock all doors (the lock icon will appear). If the doors were already locked prior to pressing the **LOCK** button, there will be no change in the status of the doors —i.e. the doors will remain locked.

- On models where starter kills were installed, pressing the **LOCK** button will also activate the starter kill.
- On alarm models, pressing the **LOCK** button will also activate the monitoring.

The Stop Confirmation Was Not Received

If after remote stopping the vehicle no confirmation was received —i.e. the display did not return to its basic state— simply press the **LOCK** button, this will refresh the display. If the engine was stopped, the smoke icon and the hourglass icon will disappear and the time will be displayed.

Pressing the **LOCK** button will also lock all doors (the lock icon will appear). If the doors were already locked prior to pressing the **LOCK** button, there will be no change in the status of the doors —i.e. the doors will remain locked.

- On models where starter kills were installed, pressing the **LOCK** button will also activate the starter kill.
- On alarm models, pressing the **LOCK** button will also activate the monitoring.

Multi-Level Features (default state)

Basic Features (press the **FUNCTION** button 1X)

FUNCTION ➤ **LOCK:** aux 2
FUNCTION ➤ **START/STOP** cold weather

Multi-Car Operation (press the **FUNCTION** button 2X)

FUNCTION ➤ **FUNCTION** ➤ **LOCK:** 2nd car lock
FUNCTION ➤ **FUNCTION** ➤ **UNLOCK:** 2nd car unlock
FUNCTION ➤ **FUNCTION** ➤ **START/STOP:** 2nd car start/stop
FUNCTION ➤ **FUNCTION** ➤ **TRUNK:** 2nd car trunk

Customized Features (press the **FUNCTION** button 3X)

(May not be compatible with some vehicles)

Your installer can add customized features such as turning on the radio, opening sliding doors, etc.

FUNCTION ➤ **FUNCTION** ➤ **FUNCTION** ➤ **LOCK:** customized feature 1
FUNCTION ➤ **FUNCTION** ➤ **FUNCTION** ➤ **UNLOCK:** customized feature 2
FUNCTION ➤ **FUNCTION** ➤ **FUNCTION** ➤ **TRUNK:** customized feature 3
FUNCTION ➤ **FUNCTION** ➤ **FUNCTION** ➤ **START/STOP:** customized feature 4

By default, the multi-level features are programmed as follows:

- Level 1 (Basic Features)
- Level 2 (Multi car operation)
- Level 3 (Customized Features)

Accessing the Multi-Level Features and Other Transmitter Functions

- To access a Level 1 feature, press and hold the **FUNCTION** button until you hear a “beep”; release the **FUNCTION** button. **5 0 1** will be displayed. This display means that you are now in Level 1. Simply press the corresponding button to access the desired feature.

- To access a Level 2 feature, press and hold the **FUNCTION** button until you hear a “beep”, release the **FUNCTION** button and press and release the **FUNCTION** button once more. **5 0 2** will be displayed. This display means that you are now in Level 2. Simply press the corresponding button to access the desired feature.
 - To access a Level 3 feature, press and hold the **FUNCTION** button until you hear a “beep”; release the **FUNCTION** button and press and release the **FUNCTION** button two more times. **5 0 3** will be displayed. This display means that you are now in Level 3. Simply press the corresponding button to access the desired feature.
 - To access the transmitter functions (clock and alarm adjustments), press and hold the **FUNCTION** button until you hear a “beep”; within three seconds of hearing the “beep”, release the **FUNCTION** button and press and release the **FUNCTION** button three more times. There will be two quick “beeps” indicating that you are now in the transmitter functions adjustment menu. The Hour position will be flashing. Simply press and release the **FUNCTION** button until you reach the desired location and proceed with the adjustment by pressing the **START/STOP** or **TRUNK** buttons.
- Your installer can customize the system as to personalize these multi-level features in an order that best suits you. Your options are:

Option 1:		
Level 1 (requires pressing the FUNCTION button 1X)	→	Multi car operation
Level 2 (requires pressing the FUNCTION button 2X)	→	Basic features
Level 3 (requires pressing the FUNCTION button 3X)	→	Customized features
Option 2:		
Level 1 (requires pressing the FUNCTION button 1X)	→	Basic features
Level 2 (requires pressing the FUNCTION button 2X)	→	Multi car operation
Level 3 (requires pressing the FUNCTION button 3X)	→	Customized features
Option 3:		
Level 1 (requires pressing the FUNCTION button 1X)	→	Customized features
Level 2 (requires pressing the FUNCTION button 2X)	→	Multi car operation
Level 3 (requires pressing the FUNCTION button 3X)	→	Basic features
Option 4:		
Level 1 (requires pressing the FUNCTION button 1X)	→	Basic features
Level 2 (requires pressing the FUNCTION button 2X)	→	Customized features
Level 3 (requires pressing the FUNCTION button 3X)	→	Multi car operation

Example: If the multi-level features were set to option 3, the setup would be as follows:

- Level 1 → Customized feature
- Level 2 → Multi car operation
- Level 3 → Basic features

The “Basic features” are now programmed as level 3 and therefore:

- To access the aux. 2 features, the user needs to press on the **FUNCTION** button three (3) times followed by the **LOCK** button.
- To access cold weather mode, the user needs to press on the **FUNCTION** button three (3) times followed by the **START/STOP** button.

Note: When using the companion remote, Shift button must be pressed twice quickly the first time. For instance, to access **customized feature 1**, press **SHIFT** twice quickly, **SHIFT** and **SHIFT** again followed by Lock.

Intrusion Codes through the LED Light

If there has been an intrusion in the vehicle while it was locked and armed, the LED will provide an intrusion code matching the type of the intrusion that took place. Disarm the alarm (**UNLOCK**) to identify the intrusion. The LED intrusion codes are flashed in continuous loops:


2 x = Doors intrusion	5 x = Panic
3 x = Shock Sense	6 x = Ignition
4 x = Hood	7 x = Trunk

The alarm diagnostic by LED projects a LED flash sequence immediately after disarming and will remain in that state of alarm memory until the ignition is turned ON.

Troubleshooting Poor Transmitting Range

- Many factors may affect the operating range of the transmitter. Some of these are:
- The condition of the battery in the transmitter.
- The operating environment (for example: downtown radio-frequency noise, airports, cellular phone towers...)
- Metal: any type of metal will affect operating range. This includes the metal in the car.
- The shape of the vehicle can affect range as well; vans in general have an especially poor range.
- The shape of the roof and A-pillars brings about considerable radio-frequency deflection (in this case the signal from the remote control). As a result, the direction in which the vehicle is facing in relation to the remote control can affect the range. Straight on – standing in front of the vehicle – generally gives you the greatest range; the second best performance is from the back. Using the remote control from either side of the vehicle will usually give the lowest range.
- The range will be significantly lower in a crowded parking lot than in open space.
- Always hold the transmitter high, approximately at shoulder height. Holding the transmitter against your chin will also increase your range: your head acts as an antenna.
- The operating range will be somewhat lower on vehicles equipped with an aftermarket or factory alarm.

Using the Remote Control

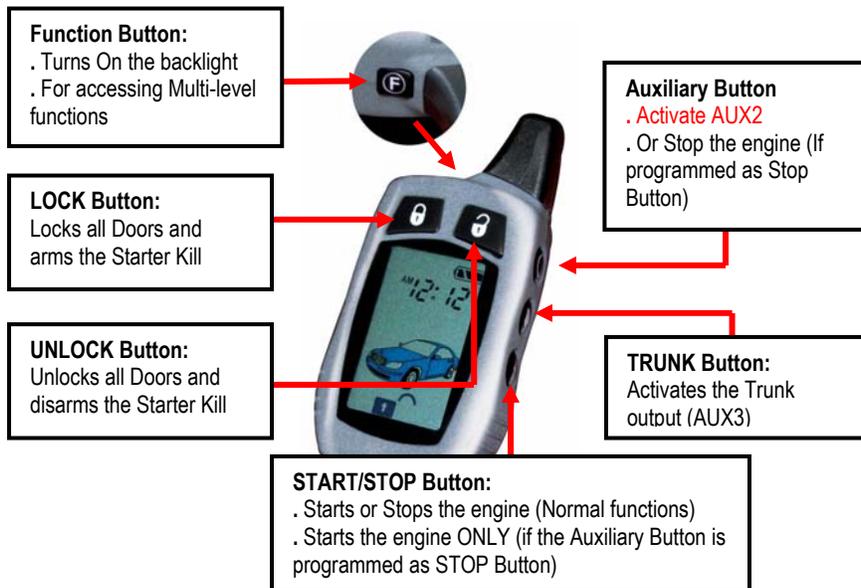

The transmitter offers several command-confirmation and timer features. This section explains some of the key transmitter functions that are available. The following section gives a summary of the button combinations used to access those functions.

Note:

If you wish to exit a function while still in the process of accessing it, simply stop and wait for at least 10 seconds: the transmitter will return to its normal state.

LCD Transmitter Operation (First Car Control)

Basic Vehicle Operation

FUNCTION	BUTTON PRESSED	ICON	BUZZER	INSTRUCTIONS /DESCRIPTION
LOCK			1 Beep	Locks the doors and arms the Starter Kill (if installed) and the alarm.
UNLOCK			2 Beeps	Unlocks the doors and disarms the Starter Kill (if installed) and the alarm.
TRUNK or AUX 3			1 Beep	Trunk output
START * (see Runtime Options below)			1 beep before engine starts followed by melody when started	Starts the engine
STOP		None	Melody	Stops the engine
AUX 2 or STOP		None	AUX 2 = 1 beep... 1 beep STOP = Melody	Activates AUX 2 (by default) or stops the engine (if programmed as Stop button).
Light ON		ON for 5 seconds		Press the button once.

Transmitter Mode Selection

FUNCTION	BUTTON PRESSED	ICON	BUZZER	INSTRUCTIONS /DESCRIPTION
POWER-SAVING MODE			Melody	Press the UNLOCK button then press FUNCTION and LOCK simultaneously
VIBRATION MODE			Vibrates 4 times	Press and hold the FUNCTION and LOCK buttons simultaneously
ALARM CLOCK MODE ON/OFF			Melody	Press once to switch the Alarm Clock ON Press twice to switch the Alarm Clock OFF

Time or Alarm Clock Adjustments

User	Transmitter
1. Press and hold the FUNCTION button until a beep is heard	The backlight will turn on the moment the FUNCTION button is pressed.
2. Upon hearing the beep, release the FUNCTION button, 50 is displayed
3. Press and hold the FUNCTION button once more	
4. Release the FUNCTION button when a beep is heard, 50 is displayed
5. Press and hold the FUNCTION button once more until a beep is heard,	
6. Release the FUNCTION button 50 is displayed
7. At that point, press and hold the FUNCTION button until 2 beeps are heard. The hour setting will start to flash.

Pressing the FUNCTION button

1X Adjust hour (current time)

2X Adjust minutes (current time)

3X Adjust hour (Alarm)

4X Adjust minutes (Alarm)

5X Melody selection for the ringing of the alarm

6X Activate (ON) / Deactivate (OFF) Alarm

- 7X Adjust hour (countdown)
- 8X Adjust minutes (countdown)
- 9X Melody selection for the countdown
- 10X .Activate (ON) / Deactivate (OFF) countdown

- b. Press the ⚡ to **decrease** the value or to activate or deactivate a function or to toggle through the melodies.
- c. To save modifications, **do not touch any buttons for approx 10 to 15 seconds.** There will be a beep and the display will return to the time.

- a. Press the 🔑 button to **increase** the value or to activate or deactivate a function or to toggle through the melodies.

Cold Weather Mode

FUNCTION	BY PRESSING	ICON	BUZZER	INSTRUCTIONS / DESCRIPTION
To enter cold weather mode	🔑 until beep	501	1 Beep	Press 🔑 until beep and then press and hold ⚡ for 3 seconds.
	⚡ for 3sec		1 Beep	
To exit cold weather mode	🔑 until beep	501	1 Beep	Press 🔑 until beep and then press and hold ⚡ for 3 seconds.
	⚡ for 3sec	none	1 Beep	

Home Valet™

FUNCTION	BY PRESSING	ICON	BUZZER	INSTRUCTIONS / DESCRIPTION
TO ENTER HOME VALET™ MODE	Step 1 : or Step 2 : + ⚡ simultaneously within 5 sec.		1 BEEP	Press or within 5 seconds, press + ⚡. The remote control will display the icon and you will hear 1 beep.
TO EXIT HOME VALET™ MODE	NONE	NONE	NONE	Insert the key in the ignition switch and turn it to the IGNITION ON / RUN position. The icon will disappear.

Parking Countdown

FUNCTION	BY PRESSING	ICON	BUZZER	INSTRUCTIONS / DESCRIPTION
FOR PARKING COUNTDOWN	🔑 + ⚡ 1 time	0:10	Melody	10 MIN COUNT DOWN
	🔑 + ⚡ 2 times	0:20	Melody	20 MIN COUNT DOWN
	🔑 + ⚡ 3 times	0:30	Melody	30 MIN COUNT DOWN
	🔑 + ⚡ 4 times	1:00	Melody	60 MIN COUNT DOWN
	🔑 + ⚡ 5 times	1:30	Melody	90 MIN COUNT DOWN
	🔑 + ⚡ 6 times	2:00	Melody	120 MIN COUNT DOWN
	🔑 + ⚡ 7 times	0:00	Melody	PARKING COUNT DOWN OFF

Safe Start Mode

FUNCTION	BY PRESSING	ICON	BUZZER	INSTRUCTIONS / DESCRIPTION
START ON SAFE START MODE	⚡ X 2	+ ⚡	BEEP	Press the ⚡ button twice within 3 seconds. Or: Press for 1 second (BEEP) then press again for 1 second (BEEP).
STOP ON SAFE START MODE	⚡	None	Melody	

*Runtime (Cannot be programmed. Serves as indication only.)

FUNCTION	BY PRESSING	ICON	GAS	DIESEL
ENGINE RUNTIME			4 minutes	9 minutes
			15 minutes	20 minutes
			25 minutes	30 minutes

LCD Transmitter Operation (Second Car Control)

Basic Vehicle Operation

FUNCTION	BUTTON PRESS	ICON	BUZZER	DESCRIPTION
LOCK	+		1 Beep	Locks the doors and arms the Starter Kill (if installed) and the alarm.
UNLOCK	+		2 Beeps	Unlocks the doors and disarms the Starter Kill (if installed) and the alarm.
START	+	+	Melody	Starts the engine
STOP	+	None	Melody	Stops the engine

or

FUNCTION	BUTTON PRESS	ICON	BUZZER	DESCRIPTION
LOCK	+ +		1 Beep	Locks the doors and arms the Starter Kill (if installed) and the alarm.
UNLOCK	+ +		2 Beeps	Unlocks the doors and disarms the Starter Kill (if installed) and the alarm.
START	+ +	+	Melody	Starts the engine
STOP	+ +	None	Melody	Stops the engine
TRUNK	+ +		1 Beep	

Start and Stop While in Safe Start Mode

FUNCTION	BUTTON PRESS	ICON	BUZZER	DESCRIPTION
START ON SAFE START MODE	+ X 2	+	Melody	Press the and buttons simultaneously twice within 3 seconds. Press for 1 second (a beep will be heard) then press 1sec and a beep will be heard again.
STOP ON SAFE START MODE	+	None	Melody	

Diagnostics – Chirps Table

Chirps	Description
1	<ul style="list-style-type: none"> Doors locked, alarm and starter kill armed. LOCK confirmation. Entering mode 1 in the programming centre. Disarmed notification
2	<ul style="list-style-type: none"> Doors unlocked, alarm and starter kill disarmed. Transmitter programmed. Entering mode 2 in the programming centre.
3	<ul style="list-style-type: none"> LOCK and arm while a zone is left unprotected. Entering mode 3 in the programming centre. Door zone left unprotected.
4	<ul style="list-style-type: none"> UNLOCK and disarm: an intrusion was detected (in warning chirps mode or full chirps mode). Entering tach-programming mode. Entering mode 4 in the programming centre.
5	<ul style="list-style-type: none"> Siren or horn chirp timing adjustment
Constant up to 60 seconds	<ul style="list-style-type: none"> In siren or horn mode: alarm condition generated by an intrusion, by panic mode or when the system is powered up. The siren or horn will sound for 60 sec.

Diagnostics – Parking Light Flash Table

Flashes	Description
1	<ul style="list-style-type: none"> Doors locked, Alarm and Starter Kill armed. End of Run Time. TRUNK button pressed Start signal received by the System. Cold Weather Mode cancelled.
2	<ul style="list-style-type: none"> Doors unlocked, alarm and starter Kill disarmed. Run time cancelled. Exit remote valet. Exit ignition valet Remote start attempt cancelled by remote.
3	<ul style="list-style-type: none"> Entering cold weather mode. Entering remote valet. Entering ignition valet
4	<ul style="list-style-type: none"> +12 V where detected on the brake line and cranking was cancelled. Entering tach-programming mode
5	<ul style="list-style-type: none"> New transmitter programmed. Tach programmed.
6	<ul style="list-style-type: none"> A remote start was attempted while a tach or a vacuum signal was detected before cranking.
8	<ul style="list-style-type: none"> Unit reset: occurs when the unit is reset to the factory defaults.
10	<ul style="list-style-type: none"> The hood switch line went to ground during cranking or run time.
1 – pause – 2	<ul style="list-style-type: none"> There was an attempt to start the vehicle while the system was in valet mode.
2 – pause – 2	<ul style="list-style-type: none"> There was an attempt to start the vehicle while the system was in home valet mode.
ON solid	<ul style="list-style-type: none"> Cold weather mode: the Brake Pedal is being held down.
ON 2 sec.	<ul style="list-style-type: none"> The Hood is up and the Hood Switch line went to ground. This is step one of the Programming Centre procedure.
ON 3 sec.	<ul style="list-style-type: none"> First press of the START/STOP button under Safe Start.
ON 4 sec.	<ul style="list-style-type: none"> Locking or unlocking a door (with Door pulses configured to 4 sec.)
ON 25 sec.	<ul style="list-style-type: none"> The hood pin-switch has been pressed twice: the unit went into step 1 of the programming centre procedure, and no transmitter activity was detected for 20 seconds. Or the unit went into step 1 of the transmitter programming procedure and no activity was detected for a few seconds. The unit has exited the transmitter programming procedure.

Irregular	<ul style="list-style-type: none">• If the unit gives irregular signals (1 to 10 flashes followed by a pause, followed by further flashes), the system is playing back start failure codes. This occurs when the hood pin-switch is pressed three times.
Constant flashes up to 60 sec.	<ul style="list-style-type: none">• In siren or horn mode: alarm condition generated by an intrusion, by panic mode or when the system is powered up.