


# VIPER<sup>®</sup>





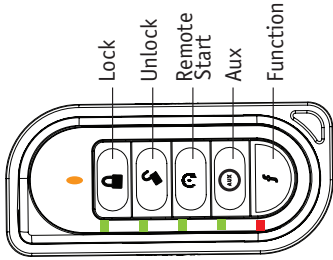

## Responder LE Model 5701

To unlock the keypad, press **f** and then press .

# Quick Reference Guide

## Remote Control Function Table

Level Button	<b>f</b> x 0	<b>f</b> x 1	<b>f</b> x 2	<b>f</b> x 3	<b>f</b> x 4
	ARM	SILENT ARM	SENSOR BYPASS	ARMED (SILENT SENSOR)	ARMED (SILENT TRIGGER)
	DISARM	SILENT DISARM	VALET MODE	CAR FINDER	
	REMOTE START	RUNTIME RESET	TIMER MODE	SMART START	REAR DEFOGGER
	TRUNK RELEASE	AUX 1	AUX 2	AUX 3	
<b>f</b>	FUNCTION SHIFT	CABIN TEMPERATURE REQUEST	ARM STATUS 2-WAY ONLY	RUNTIME CHECK 2-WAY ONLY	LAST TRIGGER REQUEST 2-WAY ONLY