



# MODEL VSS-113

## Installation Guide



This product is intended for installation by a professional installer only!  
Any attempt to install this product by any person other than a trained professional  
may result in severe damage to a vehicle's electrical system and components.



[www.astroflex.com](http://www.astroflex.com)

**Technical Support 800-461-8223**

This resource is for authorized Astroflex dealers only.

2006 Astroflex Electronics, Sherbrooke, Qc, Canada J1R 0L1

IEVSS113 0107



# Table of contents

<b>Primary Harness (H1) Wire Connection Guide .....</b>	<b>2</b>
<b>Door Lock Harness (H2) Wire Connection Guide .....</b>	<b>5</b>
<b>Peripheral Plug-In Harnesses .....</b>	<b>5</b>
Super Bright LED, 2-Pin WHITE Plug .....	5
Valet/Program Switch, 2-Pin BLUE Plug .....	5
Programming Tool, 3-Pin BLACK Plug .....	6
Mounting the Receiver/Antenna .....	6
Optional Sensor Harness 4-Pin White Plug .....	6
<b>On-Board Dual-Stage Shock Sensor .....</b>	<b>6</b>
<b>Light Flash Programming Jumper .....</b>	<b>7</b>
<b>Bypassing Sensor Inputs .....</b>	<b>7</b>
<b>System Features Learn Routine .....</b>	<b>7</b>
<b>System Features Menus .....</b>	<b>9</b>
Menu #1 - Basic Features .....	9
Menu #2 - Advanced Features .....	9
<b>Feature Descriptions .....</b>	<b>10</b>
Menu #1 - Basic Features .....	10
Menu #2 - Advanced Features .....	11
<b>Transmitter/Receiver Learn Routine .....</b>	<b>12</b>
<b>Transmitter Configurations .....</b>	<b>13</b>
Standard Configuration .....	13
<b>Diagnostics .....</b>	<b>13</b>
Arm/Disarm Diagnostics .....	13
Table of Zones .....	14
Long Term Event History .....	14
<b>Multi-Level Security Arming .....</b>	<b>14</b>
<b>Optional Vehicle Recovery System (VRS) .....</b>	<b>14</b>
<b>Nuisance Prevention® Circuitry .....</b>	<b>15</b>
<b>Rapid Resume Logic .....</b>	<b>15</b>
<b>Troubleshooting .....</b>	<b>15</b>
<b>Wiring Quick Reference Guide .....</b>	<b>16</b>

# Primary Harness (H1) Wire Connection Guide


This guide describes in detail the connection of each wire. Also included are possible applications of each wire. This system was designed with the ultimate in flexibility and security in mind. Many of the wires have more than one possible function. Please read carefully to ensure a thorough understanding of this unit.

<b>H1/1</b>	<b>----</b>	<b>PINK</b>	<b>(-) 200mA CHANNEL 2 VALIDITY OUTPUT</b>
<b>H1/2</b>	<b>----</b>	<b>RED</b>	<b>(+) CONSTANT POWER INPUT</b>
<b>H1/3</b>	<b>----</b>	<b>RED/WHITE</b>	<b>(+) SIREN OUTPUT</b>
<b>H1/4</b>	<b>----</b>	<b>ORANGE</b>	<b>(+) SWITCHED IGNITION INPUT, ZONE 5</b>
<b>H1/5</b>	<b>----</b>	<b>BLACK</b>	<b>(-) CHASSIS GROUND INPUT</b>
<b>H1/6</b>	<b>----</b>	<b>PURPLE</b>	<b>(+) DOOR TRIGGER INPUT, ZONE 3</b>
<b>H1/7</b>	<b>----</b>	<b>BLACK/WHITE</b>	<b>(-) INSTANT TRIGGER INPUT, ZONE 1</b>
<b>H1/8</b>	<b>----</b>	<b>WHITE</b>	<b>(-) DOOR TRIGGER INPUT, ZONE 3</b>
<b>H1/9</b>	<b>----</b>	<b>GREY</b>	<b>(-) 200mA DOME-LIGHT SUPERVISION OUTPUT</b>
<b>H1/10</b>	<b>----</b>	<b>PINK/WHITE</b>	<b>(-) 200mA CHANNEL 3 PROGRAMMABLE OUTPUT</b>
<b>H1/11</b>	<b>----</b>	<b>GREEN</b>	<b>(+ / -) SELECTABLE LIGHT FLASH OUTPUT</b>
<b>H1/12</b>	<b>----</b>	<b>ORANGE/BLACK</b>	<b>(-) 500mA GROUND-WHEN-ARMED OUTPUT</b>

## H1/1 PINK (-) 200 mA Channel 2 Output

When the system receives the code controlling channel 2 for longer than 1.5 seconds, the PINK wire will supply an output as long as the transmission continues.

This is often used to operate a trunk/hatch release or other relay/driven function.

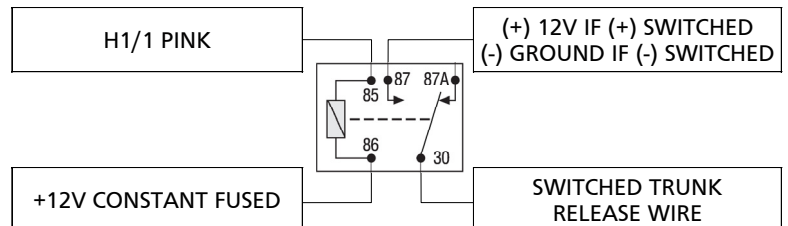

**NEVER USE** this wire to drive anything but a relay or a low-current input!

The transistorized output can only supply 200 mA of current. Connecting directly to a solenoid, motor, or other high-current device will cause it to fail.

## H1/2 RED (+) Constant Power Input


Connect to the battery positive terminal or the constant 12V supply to the ignition switch.



Always use a fuse within 12 inches of the point you obtain (+)12V. Do not use the 15 amp fuse in the harness for this purpose. This fuse protects the module itself.


## H1/3 RED/WHITE (+) Siren Output

Connect this to the RED wire of the siren. Connect the BLACK wire of the siren to (-) chassis ground, preferably at the same point you connect the control module's BLACK ground wire.

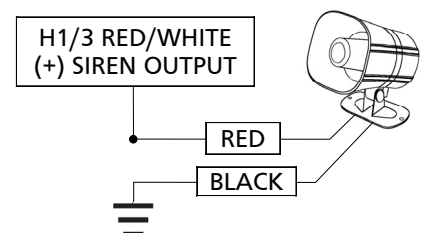


### H1/4 ORANGE (+) Switched Ignition Input

Connect this wire to the (+) 12 volts ignition wire. This wire is pre-wired to the starter kill relay and must show (+) 12 volts with the key in RUN position and during cranking. Take great care that this wire cannot be shorted to the chassis at any point.

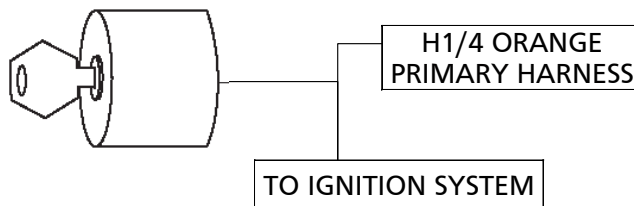

### H1/5 BLACK (-) Chassis Ground Input

Connect this wire to a clean, paint-free sheet metal location (driver kick panel) using a factory bolt that DOES NOT have any vehicle component grounds attached to it. A screw should only be used when in conjunction with a two-sided lock washer. Under dash brackets and door sheet metal are not acceptable ground points. It is recommended that all security components be grounded at the same location.

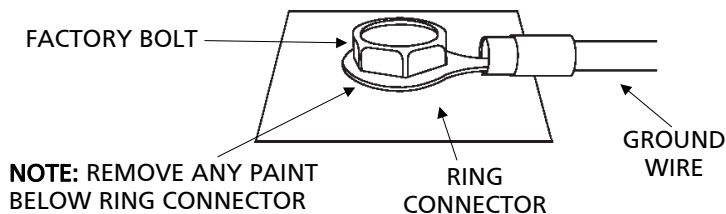


### H1/6 PURPLE (+) Door Trigger Input

Connect the PURPLE wire to a wire that shows (+)12V when any door is opened. This wire will report Zone 3.



If using a door trigger wire that has a delay, the Advanced Menu 2, feature 6 or the programming tool can be used to turn Bypass Notification off.

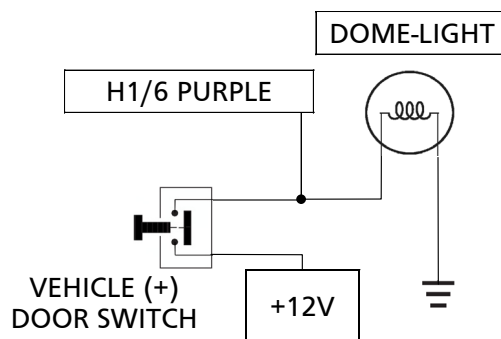

### H1/7 BLACK/WHITE (-) Instant Trigger Input


This input will respond to a negative input with an instant trigger. It is ideal for hood and trunk pins and will report on Zone 1. It can also be used with single-stage sensors. The H1/7 BLACK/WHITE instant trigger wire can also be used to shunt sensors during operation of auxiliary channels or remote start. (See Bypassing Sensor Inputs section of this guide.)

### H1/8 WHITE (-) Door Trigger Input

Most vehicles use negative door trigger circuits. Connect the WHITE wire to a wire showing ground when any door is opened. When connecting to newer model vehicles there is generally a need to use individual door triggers. This wire will report Zone 3.



If using a door trigger wire that has a delay, the Advanced Menu 2, feature 6 or the programming tool can be used to turn Bypass Notification off.

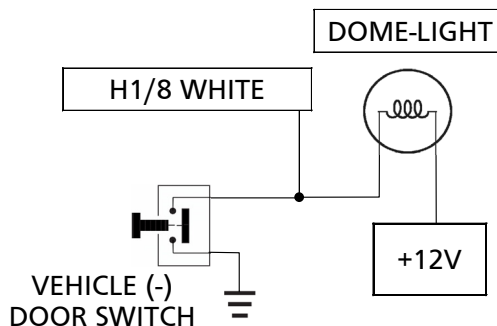


### H1/9 GREY (-) 200 mA Dome-light Supervision Output

Connect the H1/9 wire to the optional dome-light supervision relay as shown in the following diagram:



**NEVER** use this wire to drive anything but a relay or a low-current input! This transistorized output can only supply 200 mA, and connecting directly to a light bulb, motor, or other high-current device will cause the module to fail.

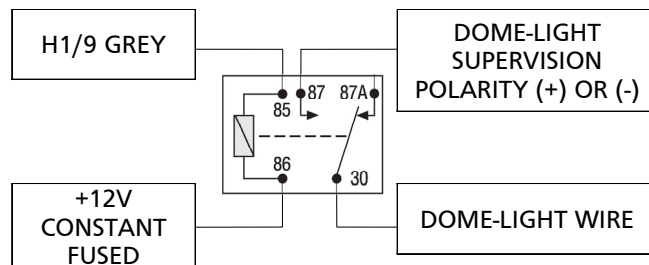

### H1/10 PINK/WHITE (-) 200 mA Channel 3 Programmable Output

This wire provides a (-) 200 mA output whenever the transmitter button(s) controlling channel three is pressed. This output can be programmed to provide the following types of output (see System Features Learn Routine section of this guide):

- A **validity** output will send a signal as long as the transmission is received.
- A **latched** output will send a signal continuously when the channel three button(s) is pressed and released. The signal will continue until channel three is pressed again.
- A **latched/reset with ignition** output works similar to the latched output, but will also reset (output will stop) when the ignition is turned on and then off.
- A **30 second timed** output will send a signal for 30 seconds when channel three is pressed. This output can be shut off during the 30-second period by pressing Channel 3 again.
- This output can also be programmed to provide a **second unlock pulse** when the unlock button is pressed a second time after disarming the system. This can be used to unlock the passenger doors when installing progressive door locks.



**NEVER** use this wire to drive anything but a relay or a low-current input! This transistorized output can only supply 200 mA, and connecting directly to a solenoid, motor, or other high-current device will cause the module to fail.

### H1/11 GREEN (+)/(-) Selectable Light Flash Output


As shipped, the H1/11 GREEN wire should be connected to the (+) parking light wire. If the light flash polarity jumper is moved to the (-) position (see the Programming Jumper section of this installation guide), this wire supplies a (-) 200 mA output. This is suitable for (-) light control.



A standard automotive SPDT relay must be used on the H1/11 light flash output wire, for parking light systems that draw 10 amps or more.




**DO NOT** connect this wire to a negative vehicle light flash wire before changing the light flash programming jumper to the negative polarity position or damage to vehicle light circuit may occur.

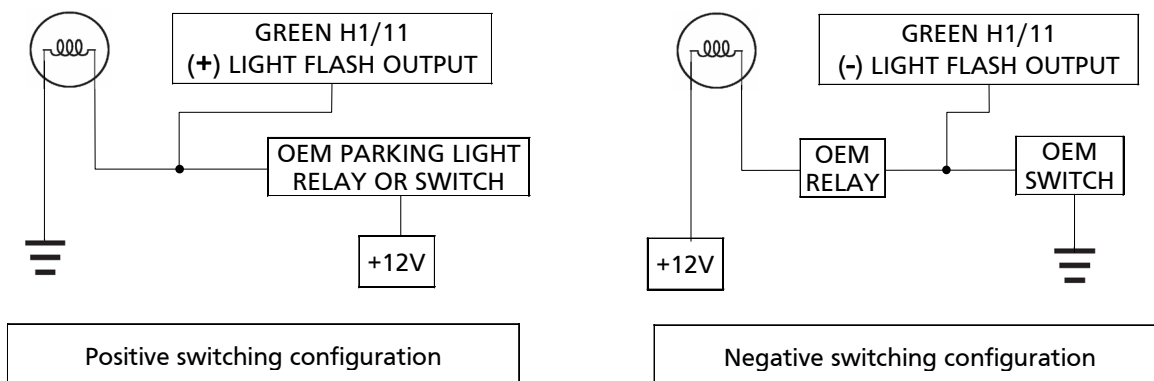

## H1/12 ORANGE/BLACK (-) 500 mA Ground When Armed Output

This wire supplies a (-) ground as long as the system is armed. This output ceases as soon as the system is disarmed. The ORANGE/BLACK wire is pre-wired to control the starter kill relay. It can supply up to 500 mA of current.

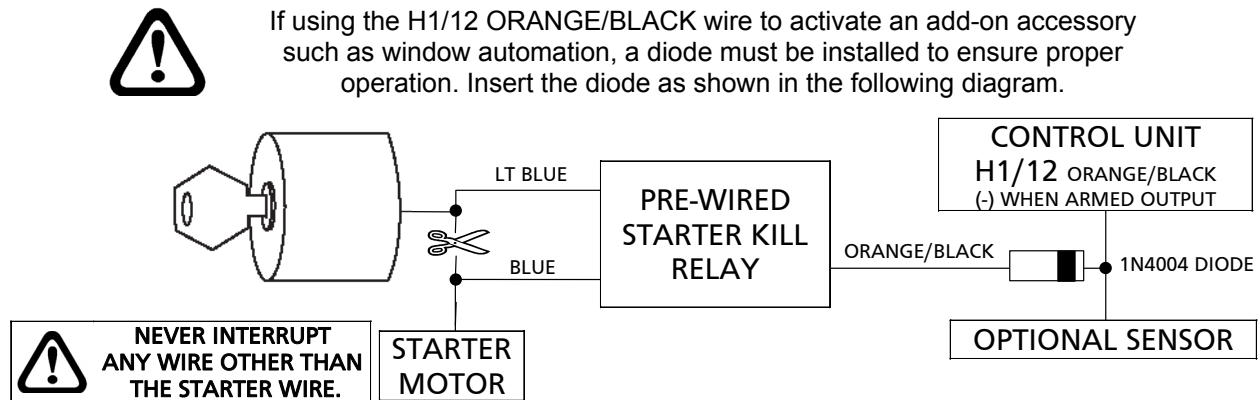

## Door Lock Harness (H2) Wire Connection Guide

H2/A	-----	BLUE	(-) UNLOCK, (+) LOCK OUTPUT
H2/B	-----	EMPTY	UNLESS USING 451M
H2/C	-----	BROWN	(-) LOCK, (+) UNLOCK OUTPUT



The door lock outputs are low current and should not be attached directly to any high current device; they are only to be used to activate relays or the DLA-2 module.



Refer to the AstroChart software for detailed instructions about connecting to the vehicle's power door lock systems.


## Peripheral Plug-In Harnesses

### SUPER BRIGHT LED, 2-PIN WHITE PLUG

The super bright LED operates at (+) 2 volt DC and plugs into the two-pin WHITE port. Make sure the LED wires are not shorted to ground as the LED will be damaged. Multiple LED's can be used, but they must be wired in series. The LED fits into a 9/32-inch mounting hole. Be sure to check for clearance prior to drilling the mounting hole.




Never use a BLUE LED in combination with a RED LED.

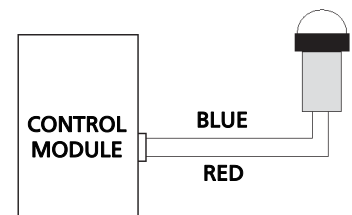

### VALET/PROGRAM SWITCH, 2-PIN BLUE PLUG

The Valet/Program button should be accessible from the driver's seat. It plugs into the BLUE port on the side of the unit. Since the system features Valet by using the remote transmitter, the button can be well hidden. Consider how the button will be used before choosing a mounting location. Check for rear clearance before drilling a 9/32-inch hole and mounting the button. The GREY wire in the two-pin plug may also be used as a (+) ghost switch input and can be connected to any (+) switch in the vehicle. (See Feature Descriptions section of this guide.)

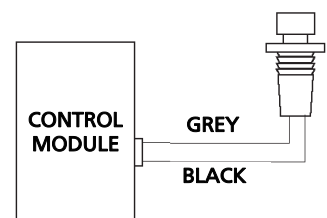

## PROGRAMMING TOOL, 3-PIN BLACK PLUG



The BLACK three-pin port is provided for programming of the unit. When using the programming tool, it is possible to configure any and all of the programmable functions. For more information please refer to the guide packaged with the programmer.


## MOUNTING THE RECEIVER/ANTENNA

Receiver/antenna position should be discussed with the vehicle owner prior to installation, since the antenna may be visible to the vehicle's operator.

The best location for the receiver/antenna is centred high on either the front or rear windshield. For optimal range, the antenna should be mounted vertically. It can be mounted horizontally in relation to the windshield or under the dashboard away from metal, but range will be diminished. Metallic window tint can also affect range, so this should be a consideration when determining the mounting location.

After determining the best mounting location, follow these steps:

1. Clean the mounting area with a quality glass cleaner or alcohol to remove any dirt or residue.
2. Plug the receiver/antenna cable into the receiver/antenna.
3. Mount the receiver/antenna using the supplied double-sided tape.
4. Route the receiver/antenna cable to the control module and plug it into the four-pin antenna connector.

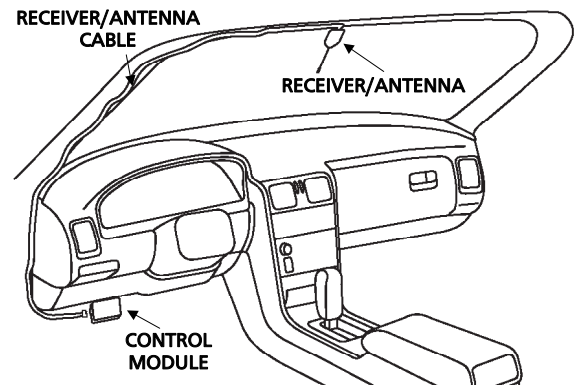

## OPTIONAL SENSOR HARNESS 4-PIN WHITE PLUG

The four-pin sensor harness is optional, and is not included with this unit.

### RED (+) 12V Constant and BLACK (-) Ground


These wires supply constant (+) 12 volts and ground to the optional sensor.

### BLUE & GREEN (-) Multiplex Input

These wires are multiplex inputs. If a (-) input of less than 0.8 seconds is supplied to either wire, the Warn-Away response will occur. A (-) input of longer than 0.8 seconds to either wire will initiate the triggered sequence and report Zone 4.

## On-Board Dual-Stage Shock Sensor

There is a dual-stage shock sensor inside the control unit. Adjustments are made via the rotary control as indicated in the diagram. Since the shock sensor does not work well when mounted firmly to metal, we do not recommend screwing down the control module. The full trigger of the on-board shock sensor reports Zone 2. (See **Table of Zones** section of this guide.) Note: When adjusting the sensor, it must be in the same mounting location that it will be after the installation is completed. Adjusting the sensor and then relocating the module requires readjustment.

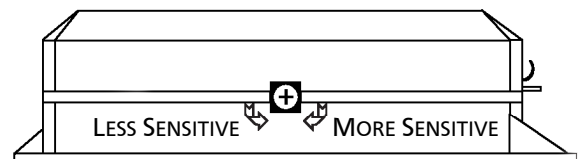



# Light Flash Programming Jumper


This jumper is used to determine the light flash output. In the (+) position, the on-board relay is enabled and the unit will output (+)12V on the GREEN wire, H1/11. In the (-) position, the onboard relay is disabled. The GREEN wire, H1/11, will supply a 200 mA (-) output suitable for driving factory parking light relays.



A standard automotive SPDT relay must be used on the H1/11 light flash output harness wire for parking light circuits that draw 10 amps or more.




**DO NOT** connect the H1/11 light flash wire to a negative vehicle light flash wire before changing the programming jumper to the negative polarity position or damage to vehicle light circuit may occur.

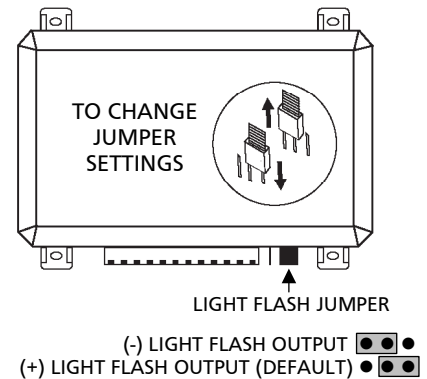

## Bypassing Sensor Inputs

There are times when you need to temporarily bypass all sensor inputs to the unit, such as when remote starting the vehicle. Anytime an auxiliary channel output is used, all inputs are bypassed for 5 seconds. During the 5 second bypass period, ground can be supplied to the H1/7 BLACK/WHITE wire without triggering the unit. When the 5 second bypass period ends, if the unit sees ground on the H1/7 BLACK/WHITE wire, all trigger inputs except the door trigger input will remain bypassed until 5 seconds after ground is removed from the BLACK/WHITE wire. This can be done using the Ground When Running output of an AstroStart remote engine starting unit as shown in the following diagram:

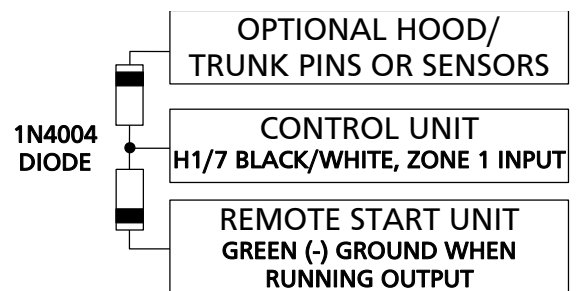


## System Features Learn Routine


The System Features Learn Routine dictates how the unit operates. Due to the number of steps, they have been broken up into two menus. It is possible to access and change any of the feature settings using the Valet/Program switch. However, this process can be greatly simplified by using the programming tool. Any of the settings can be changed and then assigned to a particular transmitter, up to four, a feature called Owner Recognition. Each time that particular transmitter is used to disarm the system, the assigned feature settings will be recalled. Owner Recognition is only possible when programming the unit via the programming tool.

If the system was previously programmed using the programming tool, the learn routine may be locked. If the siren generates one long chirp when attempting to program the unit, the learn routine is locked and must be unlocked using the programming tool.

**To enter programming mode :**

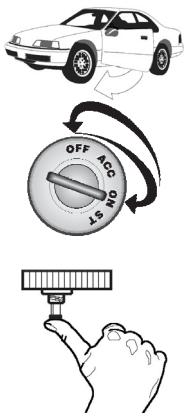

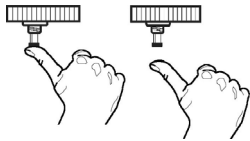


1. **Open a door.** (The H1/8 WHITE wire or the H1/6 PURPLE wire must be connected.)
2. **Ignition.** Turn the ignition on, then back off: (The H1/4 ORANGE wire must be connected.)
3. **Select a Menu.** Press and HOLD the Valet/Program switch: (The Valet/Program switch must be plugged into the blue port.) After three seconds the siren will chirp once indicating entry to the Basic Features Menu #1. If this is the menu you wish to access, release the button and go on to Step 4. If the button is not released, you will jump to the Advanced Features Menu #2 and the siren will chirp twice. Once you have selected the desired menu, release the Valet/Program button and then proceed to Step 4.




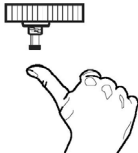
4. **Select a Feature.** Press and release the Valet/Program switch the number of times corresponding to the feature you wish to change. For example, to access the third feature, press and release the switch three times. Then press the switch once more and HOLD it. The siren will chirp the number of times equal to the step you have accessed.



5. **Program the Feature.** While HOLDING the Valet/Program switch, you can toggle the feature on and off using the remote transmitter. Pressing  will select the one chirp setting. Pressing  or  will select the two chirp setting. (See System Features Menus section of this guide.)



The Valet pulse count feature (2-5) and the Channel three timed output (2-9) have five possible settings each. Pressing  will toggle through all the two-chirp settings



6. **Release the Valet/Program Switch.**

#### Once a feature is programmed:

- Other features can be programmed within the same menu.
- Another menu can be selected.
- The learn routine can be exited if programming is complete.

#### To access another feature in the same menu:

1. Press and release the Valet/Program switch the number of times necessary to advance from the feature you just programmed to the next one you want to program.
2. Then press the Valet/Program switch once more and HOLD it.

For example, if you just programmed the third feature in the menu and you would like to program the seventh feature in the menu, you would press and release the Valet/Program switch four times and then press it once more and HOLD it. The siren would chirp seven times to confirm access to the seventh feature.

#### To select another menu:

1. Press and HOLD the Valet/Program switch.
2. After three seconds, the unit will advance to the next menu and the siren will chirp, indicating which menu has been accessed.

For instance, if you just programmed some features in Menu #1 (Basic Features) and you wish to program a feature in Menu #2, you press and HOLD the Valet/Program button. After three seconds, the siren chirps twice indicating access to Menu #2.

#### To exit the learn routine do one of the following:

- Close the open door.
- Turn the ignition on.
- No activity for longer than 15 seconds.
- Press the Valet/Program switch too many times.

# System Features Menus

---

## MENU #1 - BASIC FEATURES

Items in bold text have been programmed to the default setting at the factory.

Feature Number	One Chirp Setting	Two-Chirp Setting
1-1	<b>Active arming</b>	Passive arming
1-2	<b>Chirps ON</b>	Chirps OFF
1-3	<b>Ignition controlled door locks ON</b>	Ignition controlled door locks OFF
1-4	<b>Active locking only</b>	Passive locking
1-5	<b>Panic with ignition on</b>	No Panic with ignition on
1-6	<b>0.8 second door lock pulses</b>	3.5 second door lock pulses/0.4 sec.
1-7	<b>Forced passive arming ON</b>	Forced passive arming OFF
1-8	Automatic Engine Disable ON	<b>Automatic Engine Disable OFF</b>
1-9	<b>Armed When Driving (AWD)</b>	Vehicle Recovery System (VRS)
1-10	<b>Code Hopping™ ON</b>	Code Hopping™ OFF

## MENU #2 - ADVANCED FEATURES

Feature Number	One Chirp Setting	Two-Chirp Setting
2-1	<b>Siren</b>	Horn honk
2-2	<b>30-second siren duration</b>	60-second siren duration
2-3	<b>Nuisance Prevention® Circuitry ON</b>	Nuisance Prevention® Circuitry OFF
2-4	<b>Progressive door trigger</b>	Instant door trigger
2-5	<b>Valet switch input: 1 pulse</b>	Valet switch input: 2-5 pulses
2-6	<b>Bypass Notification ON</b>	Bypass Notification OFF
2-7	<b>Ignition-controlled dome-light ON</b>	Ignition-controlled dome-light OFF
2-8	<b>Single unlock pulse</b>	Double unlock pulse
2-9	<b>Single lock pulse</b>	Double lock pulse
2-10	<b>Channel 3: Validity</b>	Channel 3: latched/latched, reset with ignition/30-second timed/ second unlock output*
2-11	Comfort Closure (On) (20 sec.)	<b>Comfort Closure (Off)</b>
*Second unlock is only available if Feature 2-8 is programmed to single pulse. Two-Chirp		

# Feature Descriptions

The features of the system are described below. Features that have additional settings that can be selected only when programming with the programming tool are indicated by the following icon:



## MENU #1 - BASIC FEATURES

**1-1 ACTIVE/PASSIVE ARMING:** When active arming is selected, the system will only arm when the transmitter is used. When set to passive, the system will arm automatically 30 seconds after the last door is closed. To alert the consumer of passive arming, the siren will chirp 20 seconds after the door is closed. This provides the consumer with an audible prior to the system actually arming. At the 30 second mark, the system will arm but the siren will not chirp.

**1-2 CHIRPS ON/OFF:** This feature controls the chirps that confirm the arming and disarming of the system.



**1-3 IGNITION CONTROLLED DOOR LOCKS ON/OFF:** When turned on, the doors will lock three seconds after the ignition is turned on and unlock when the ignition is turned off. The programming tool will display separate steps for ignition lock and ignition unlock. They can be programmed on or off independently.

**1-4 ACTIVE/PASSIVE LOCKING:** If passive arming is selected in step 1-1, then the system can be programmed to either lock the doors when passive arming occurs, or only lock the doors when the system is armed via the transmitter. Active locking means the system will not lock the doors when it passively arms. Passive locking means that the system will lock the doors when it passively arms.



Remember, when passive arming is selected, the unit will chirp 20 seconds after the last door is closed. The system does not actually arm or lock the doors until 30 seconds after the door has been closed.

**1-5 PANIC WITH IGNITION ON / OFF:** This step controls whether or not the Panic Mode is available with the ignition on. In some states, there are laws prohibiting a siren from sounding in a moving vehicle. This feature makes the system compliant with these regulations.

**1-6 DOOR LOCK PULSE DURATION:** Some European vehicles require longer lock and unlock pulses to operate the vacuum pump. Programming the system to provide 3.5 second pulses, will accommodate the door lock interface in these vehicles. The default setting is 0.8 second door lock pulses. For some vehicles a 0.4 second pulse duration is required to prevent the windows from moving.

**1-7 FORCED PASSIVE ARMING ON/OFF:** To use this feature, passive arming must be selected in step 1-1. When turned on, forced passive arming will ensure that the system will passively arm, even if a zone is left open or invalid. Forced passive arming occurs one hour after the ignition is turned off.

**1-8 AUTOMATIC ENGINE DISABLE (AED) ON/OFF:** AED is a full-time, passive starter disable that works independently of the security system. When turned on, the ORANGE/BLACK, ground when- armed output (H1/12) will go active 30 seconds after the ignition is turned off. The LED will flash at half its normal rate when the ignition is turned off to indicate that AED is active and will interrupt the starter in 30 seconds. AED does not occur in Valet mode and can be bypassed using the emergency override procedure. The transmitter can also be used to disarm AED.

**1-9 ARMED WHILE DRIVING/VEHICLE RECOVERY SYSTEM:** In the default setting (Armed While Driving), the system can be armed with the ignition on. When armed, the ground when- armed is not active and the sensors are bypassed. The door triggers will remain active. If programmed to the Vehicle Recovery System (VRS®) setting, VRS® will be activated.

**1-10 CODE-HOPPING™ ON/OFF:** The system uses a mathematical formula to change its code each time the transmitter and receiver communicate. This makes the group of bits or “word” from the transmitter very long. The longer the word is, the easier it is to block its transmission to the unit. Disabling the Code-Hopping™ feature lets the receiver ignore the Code-Hopping™ part of the transmitted word. As a result, the unit may have better range with Code-Hopping™ off.

## MENU #2 - ADVANCED FEATURES

**2-1 SIREN/HORN HONK:** The system can be programmed to output pulses instead of a continuous output when the system is triggered. This is useful to honk the factory horn in applications where a siren is undesirable. Remember that the unit is only capable of supplying 1 amp of current. A relay will be required to interface with most factory horn systems.



**2-2 SIREN DURATION 30/60 SECONDS:** It is possible to program the unit to sound for 30 or 60 seconds during the triggered sequence. Some states have laws regulating how long a security system can sound. When using the programming tool, the siren can be programmed to sound for any length of time ranging from 1 to 180 seconds. Using the SELECT button of the programming tool will adjust the siren duration in one second increments.

**2-3 NUISANCE PREVENTION® CIRCUITRY (NPC®) ON/OFF:** NPC® stops repeated triggering of the same zone. If one zone is triggered three times in one hour, that zone is bypassed for one hour, starting from the time of the third trigger. During that hour, if the system detects a trigger on that zone again, the system resets the one hour timer. If one hour passes and the zone has not triggered again, the zone is activated and can trigger the system again. If NPC® is turned off, the system will respond to repeated triggers on the sensor inputs and will do so indefinitely. Some states have laws regulating how many times a security system can trigger before it is considered a nuisance and the vehicle is towed away. Refer to the owner's manual for additional details.

**2-4 PROGRESSIVE DOOR TRIGGER ON/OFF:** The system responds to a door trigger input with a progressive response. When the door is opened with the system armed, the siren will chirp 10 times prior to the full triggered sequence. The door trigger is still treated as an instant trigger and closing the door quickly will not prevent a full triggered sequence from occurring. If the progressive door trigger is programmed off, the full siren output will occur the moment the door is opened.

**2-5 VALET PULSE COUNT ONE TO FIVE PULSES:** The system can be programmed to count the number presses of the valet button before disarming the security system or VRS®. The factory default setting is one pulse. The unit can be set for two to five pulses using the two-chirp setting to select the pulse count.

Ghost Switch Option: For added security, the GREY wire on the two-pin Valet/Program can be connected to any switch in the vehicle that provides a positive (+) momentary pulse.



**2-6 BYPASS NOTIFICATION ON/OFF:** when programmed on, any active zone input to the system during arming will generate a bypass notification chirp. When programmed OFF, no bypass notification chirps will be generated if any zone is active during arming.

**2-7 IGNITION-CONTROLLED DOME-LIGHT SUPERVISION ON/OFF:** If turned on, the system will turn on the DOME-LIGHT for 30 seconds when the ignition is turned off. The optional DOME-LIGHT supervision feature must be installed.

**2-8 DOUBLE PULSE UNLOCK ON/OFF:** Some vehicles require two pulses on a single wire to unlock the doors. When the double pulse unlock feature is turned on, the BLUE H2/A wire will supply two negative pulses instead of a single pulse. At the same time, the BROWN H2/C wire will supply two positive pulses instead of a single pulse. This makes it possible to directly interface with double pulse vehicles without any extra parts.

**2-9 DOUBLE PULSE LOCK:** Some vehicles require two pulses on a single wire to lock the doors. When the double pulse lock feature is turned on, the BROWN H2/C wire will supply two negative pulses instead of a single pulse. At the same time, the BLUE H2/A wire will supply two positive pulses instead of a single pulse. This makes it possible to directly interface with double pulse vehicles without any extra parts.

**2-10 CHANNEL 3 VALIDITY/LATCHED/LATCHED RESET WITH IGNITION/30 SECOND TIMED/SECOND UNLOCK OUTPUT:** Channel 3 can be programmed for these output configurations. The unit is set to the default validity output. To change the configuration, use the two-chirp setting to toggle to the different configurations.

**2-11 COMFORT CLOSURE:** The system can be programmed to close the windows when the system is armed. A 20-second output starts 200mS after the last lock  pulse. The Comfort Closure output will be cancelled if the unlock  button is pressed. If programmed, the lock output wire will provide this function.



Comfort Closure is deleted if one-time bypass is activated.

# Transmitter/Receiver Learn Routine

The system comes with two transmitters that have been taught to it. The system can store up to four different transmitter codes in memory. Use the following learn routine to add transmitters to the system or to change button assignments if desired. If the system was previously programmed using the programming tool, the learn routine may be locked.

If the siren generates one long chirp when attempting to program the unit, the learn routine is locked and must be unlocked using the programming tool before proceeding.

**To enter programming mode :**



1. **Open a door.** (The H1/8 WHITE wire or the H1/6 PURPLE wire must be connected.)



 
2. **Ignition.** Turn the ignition on: (The H1/4 ORANGE wire must be connected.)



3. **Select the receiver channel.** Press and release the Valet/Program button the number of times necessary to access the desired channel.

Press and hold the Valet/Program button once more. The siren will chirp and the LED will blink the number of times corresponding to the channel that is accessed.

Channel Number	Function	Wire Colour
1	Arm / Disarm	
2	Panic only	
3	Silent Mode / Remote Valet / Trunk Release	PINK
4	Remote Start or other accessories	PINK/WHITE
5	Lock / Arm / Panic ON / Panic OFF	
6	Unlock / Disarm / Panic ON / Panic OFF	
7	Auto-learn Standard Configuration	
8	Delete all transmitters	



4. **Press the transmitter button:** While holding the Valet/Program button, press the button from the transmitter that you wish to assign to the selected channel. The unit will chirp indicating successful programming. It is not possible to teach a transmitter button to the system more than once.

**Channels #2, 5, 6:** Channels 2, 5, and 6 are used to assign the arm, disarm and panic functions to separate buttons on the remote control. Teaching a button to Channel 5 or Channel 1 erases some information about that remote from memory, and auxiliary functions that are desired may have to be reprogrammed.

**Channel #8:** If any button from a known transmitter is programmed to Channel 8, all transmitters will be erased from memory and the system features will revert to the default settings. This is useful in cases where the one of the customer's transmitters is lost or stolen. This will erase any lost or stolen transmitters from the system's memory. It can also be used to start from scratch if the transmitter buttons were programmed incorrectly.



5. **Release.** Once the code is learned, the Valet/Program button can be released.

### To exit the learn routine:






One long chirp indicates that Learn Routine has been exited. Learn Routine will be exited if any of the following occurs:

- Ignition is turned off.
- Door is closed.
- Valet/Program button is pressed too many times.
- More than 15 seconds elapse between steps.

## Transmitter Configurations

The transmitters can be programmed with the standard configurations by using the Auto Learn functions in the Transmitter/Receiver Learn Routine.

### STANDARD CONFIGURATION

Button	Pressing duration	Operates
	1 sec.	The <b>locking, arming</b> functions and the <b>deactivation</b> of the <b>Panic mode</b> .
	5 sec.	The <b>panic mode</b> .
	1 sec.	The <b>unlocking, disarming</b> functions and the <b>deactivation</b> of the <b>Panic mode</b> .
	5 sec.	The <b>panic mode</b> .
	1.5 sec.	<b>Channel 2</b>
	5 sec.	The <b>Silent Mode™</b> .
 & 	1 sec.	<b>Channel 3.</b>

## Diagnostics

The system's microprocessor monitors and reports all active and violated zones when arming and disarming. LED flashes indicate the active or violated zone; siren chirps indicate system status.

### ARM/DISARM DIAGNOSTICS

The number of siren chirps will indicate the status of the alarm when arming and disarming. For information on which zone is active or has been violated refer to the Table of Zones.

#### System Status Chirps

Action	Number of Chirps	Description
Arm	1	System armed
Arm	1 (3 second delay), 1	System armed with Bypass Notification
Disarm	2	System disarmed
Disarm	4	System disarmed with Tamper Alert
Disarm	5	System disarmed NPC® active



## TABLE OF ZONES

Zone No.	Trigger type	Input description
1	Instant	H1/7 BLACK/WHITE - Connect to optional hood/trunk pins.
2	On-board shock sensor	Heavy impact detected by the on-board shock sensor.
3	Two-stage, progresses from	Door switch circuit. H1/8 WHITE or H1/6 PURPLE warning to full alarm
4	Multiplexed Input	BLUE and GREEN wires of optional sensor plug. Inputs shorter than 0.8 seconds will trigger a Warn Away response, while inputs longer than 0.8 seconds will instantly trigger a full alarm sequence and report Zone 4.
5	Two-stage (similar to doors)	Ignition input. H1/4 ORANGE.



The Warn Away® response does not report on the LED.

## LONG TERM EVENT HISTORY

 
The system stores the last two full triggers in memory. These are not erasable. Each time the unit sees a full trigger, the older of the two triggers in memory will be replaced by the new trigger. To access long term event history:



1. With the ignition off, press and HOLD the Valet/Program switch.

2. Turn on the ignition.

3. Release the Valet/Program switch.



4. Press and release the Valet/Program switch within 5 seconds. The LED will flash in groups indicating the last two zones that triggered the unit. The LED will flash for one minute or until the ignition is turned off.



The Warning Zone triggers are not stored to memory and will not be reported.

## Multi-Level Security Arming

Multi-Level Security arming allows the operator to select which inputs and sensors are active during a particular arming cycle. For a full description of Multi-Level Security Arming operation for testing purposes refer to the owner's manual.

## Optional Vehicle Recovery System (VRS®)

VRS® is an optional feature designed to disable a vehicle during a carjacking event. It must be programmed in the features menu and the Failsafe Starter Kill must be installed for it to work properly. For operational instructions when testing VRS® refer to the owner's manual.



# Nuisance Prevention® Circuitry

---

Nuisance Prevention® Circuitry bypasses any zone that triggers the system more than three times within a one hour period. For a full description of NPC® operations refer to the owner's manual.



When testing the systems sensor and trigger inputs reset NPC® by turning on the ignition after every third system trigger. Door input does not respond with the progressive trigger, but with immediate full alarm.

## Rapid Resume Logic

---

Rapid Resume Logic ensures that when the system is powered up it will return to the same state it was in when power is disconnected. For a full description of Rapid Resume Logic refer to the owner's manual.

## Troubleshooting

---

### ***Starter kill doesn't work.***

- Is the correct starter wire being interrupted? If the car starts when the starter kill relay is completely disconnected, the wrong starter wire has been cut and interrupted.
- ORANGE wire is not connected to true ignition. It is connected to an accessory circuit.

### ***Shock sensor doesn't trigger the alarm.***

- Has the NPC® system been triggered? If so, you will hear five chirps when disarming. To check this, turn the ignition key on and off to clear the NPC® from memory, and then retest the shock sensor. For a detailed description of NPC®, see Owner's Guide.

### ***Door input does not immediately trigger full alarm. Instead, I hear chirps for the first three seconds.***

- That's how the progressive two-stage door input works! This is the instant response feature of this system. Even if the door is closed immediately, the system provides an instant trigger by chirping then progresses to a constant siren.

### ***Closing the door triggers the system, but opening the door does not.***

- Have you correctly identified the type of door switch system? This happens often when the wrong door input has been used.

### ***System will not passively arm until it is remotely armed and then disarmed.***

- Are the door inputs connected? Is a BLACK / WHITE wire connected to the door trigger wire in the vehicle? Either the WHITE H1/8 or the PURPLE H1/6 should be used instead.

### ***Door input does not respond with the progressive trigger, but with immediate full alarm.***

- What zone does the LED indicate? If the LED indicates that the impact sensor caused the trigger, the sensor may be detecting the door opening. Reducing the sensitivity or relocating the sensor can often solve this problem. If the LED indicates that the door caused the trigger, you may have programmed the progressive door trigger off. (See Feature 2-4 in the Feature Descriptions section of this guide.)

### ***The Valet button doesn't work.***

- Is it plugged into the correct socket? Check the System Features Learn Routine for the programmed Valet pulse count.

### ***Status LED doesn't work.***

- Make sure that it is plugged in. (See Plug-In Harnesses section of this guide.) Is the LED plugged into the correct socket?

# Wiring Quick Reference Guide

