


# RS-400a REFERENCE CARD

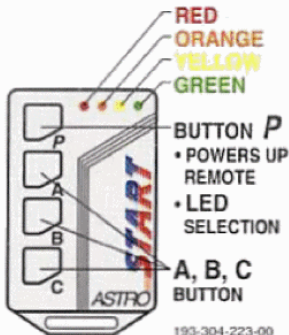

193-304-223-00

## S.O.S.

You want to disarm the alarm you previously activated by remote but you lost or broke your transmitter.

- In less than 30 seconds,
  - Get in your vehicle (the alarm sounds off)
  - Turn ignition key to the ON position (do not start)
  - Leave your vehicle and close all doors.
- Patiently wait two minutes, without touching your vehicle, until the alarm shuts off.
- The ASTROSTART™ alarm switches to passive mode. From now on, only the ignition key is required to arm/disarm the system. Read about "passive mode" in your user manual. Ask your ASTROSTART™ dealer to repair or replace your transmitter as soon as possible.

P	RED	ORANGE	YELLOW			GREEN		
A	START STOP CONTINUOUS MODE	START ONLY WITH HORN CONTINUOUS MODE	START WITH REAR WINDOW DEFROSTER, STOP, CONTINUOUS MODE	HORN (JOKE) MELODIES (A,A)	ROLL WINDOWS DOWN (A,B)		STATUS CODES DIS PLAY ON L.E.D.	CAR FINDER SHUTS OFF ALARM WITHOUT DISARMING (A,A)
B	LOCK AND ARM WITHOUT SIREN	LOCK WITHOUT ARMING	LOCK AND ARM WITH SIREN	SHOCK SENSOR BYPASS (B & A)	ROLL WINDOWS UP (B,A)	AUXILIARY OUTPUT #1 (B,C)		NUMBER OF TRANS- MITTER (B, B)
C	UNLOCK AND DISARM WITHOUT SIREN	OPEN TRUNK UNLOCK AND DISARM WITH SIREN	UNLOCK AND DISARM WITH SIREN	VALET MODE FOR ALARM (C & B)		AUXILIARY OUTPUT #2 (C,B)	ACTIVATE/ DEACTIVATE LOW TEMP.MODE WITHOUT HORN	ACTIVATE/ DEACTIVATE LOW TEMP.MODE WITH HORN (C,C)