

VIPER[®]home

502M Motion Detector Quick Reference Guide

Congratulations on the purchase of your Viper Home Security Accessory. This guide walks you through the process of adding this accessory to your system and for mounting your accessory.

Note: Make sure you already have a Viper Home Starter kit or Viper Home Hub installed. Please refer to the quick reference guides found in these systems, or visit: www.viper.com/home/support.

1. Log into your Viper Home account at:
home.viper.com
2. To pair the motion detector to your system:
Click on the "Devices" tab
Click "Add New Device"
Click "Add Motion Detector"
3. You are then prompted to insert the batteries provided within three minutes. First, remove the mounting piece/battery cover on the back of the motion detector, and install the AA batteries provided.
4. Once the batteries are inserted the system automatically connects



and confirms the motion detector is paired with your system.


5. After the motion detector is paired, you can give it a unique name (i.e. "Living Room"). In this screen, if you click the "More" button, you can set up additional options for the device, such as "arm stay", or "custom arm", as well as select what action the motion detector performs when triggered.
6. Once completed, click the "Finish" button. The motion detector is now ready for mounting.

Mounting instructions:

1. The spherical lens must be pointing down and placed on a wall where it will detect movement inside the room.
2. The device should be placed approximately 86" from the floor and at least 4" from the ceiling.

Note: Do not place the device in an area that receives direct sunlight.

3. Once you have chosen the desired mounting location, remove the backing from the tape on the battery cover and mount the device. Alternatively, you can also mount the device with standard drywall screws by screwing

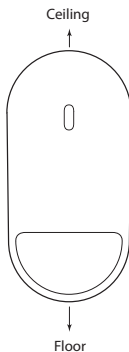

the mounting piece directly to the wall through the circular dimples on the mounting piece.

Additional Information

Further information – For additional support, including additional information videos and installation tips, visit: www.viper.com/home/support

Warranty Information - Your system comes with a one year warranty. For complete warranty details visit: www.viper.com/home/support



This device is intended for indoor use only and should not be mounted in any outside areas. Mounting the device outside will void the warranty.

FCC/ID Notice: This device complies with Part 15 of FCC rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION! Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

DIRECTED®

Directed is committed to delivering world class quality products and services that excite and delight our customers.

Vista, CA 92081
www.viper.com

IG502M 2013-09

© 2013 Directed. All rights reserved.