

P/N 7121V

**VIPER<sup>®</sup>**

**NO ONE DARES  
COME CLOSE<sup>®</sup>**

Compatible with the  
following models:

## 2-Button Remote Control

Model 3121V		

# REPLACEMENT TRANSMITTER

## 2-Button Remote Control

The following Learn Routine is used to program this replacement remote control to your system.

1. With the system disarmed, turn the ignition ON and OFF 5 times within 15 seconds, and stay in the ON position after the fifth time you turn it ON. 3 seconds later, the siren will chirp 3 times to indicate the system entered remote learning mode.
2. Press any button on the remote. The siren will chirp the number of times corresponding to the sequence of the remote location in the system. For example, the first remote learned to the system will chirp once, the second two times, and so on, until a total of 4 remotes are learned to the system.
3. Up to 4 remotes can be learned to the system. If you want to learn a fifth remote, the first remote will be cleared from the system, and when you learn a sixth remote, the second remote will be cleared, and so on.
4. To exit learn mode – The system will exit learn mode automatically after 8 seconds or you can manually exit learn mode by turning the ignition OFF. The siren will emit 1 long chirp to indicate that learn mode has been exited.

### FCC/ID Notice

This device complies with Part 15 of FCC rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.  
**CAUTION!** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

WWW.DIRECTED.COM  
MADE IN CHINA

© 2017 Directed. CA 92081  
All rights reserved.

P/N 7121V

11/17



**DIRECTED®**

560-10172 (R1.0)