



Garage Door Interface Instructions

How to Connect the Garage Door Interface

1. Unplug the power cord(s) of the garage door opener(s).
2. Mount the Interface *above the garage door* as shown in diagram 1.

NOTE: Do not mount the Garage Door Interface over or near metal. Doing so will reduce remote control range.

3. Connect the supplied brown, twin-lead wire to the two screws on the Interface.

NOTE: Keep all wires away from the garage door and drive mechanism.

4. Attach the other end of the twin-lead wire to the same screws used for the interior push button control, as shown in diagram 1.
5. Plug the AC adaptor into a wall outlet and plug its connector into the Interface.

NOTE: Keep the cord away from the garage door and drive mechanism.

6. Reconnect the garage door opener's power cord.
7. Position the antenna wire.

How to Program Avital Remote Controls Into the Interface

Your Garage Door Interface can recognize as many as 4 different Avital remote controls, regardless of their types. Additional remote controls are available from your local Avital dealer or you may call Avital Technologies at (800) 253-0334.

To Program a Remote Control:

1. Press and hold the button on the Interface while simultaneously pressing the button on your remote control.
2. When the LED on the Interface lights up, programming is complete.

How to Delete the Code of a Lost or Stolen Remote Control

If you wish to delete the code of a lost or stolen remote control, you need to "push" its code out of the receiver's memory. Doing so is simple. Just repeat steps 1-2 above for a total of 4 times with your current remote control. If you are using two remote controls, repeat the steps twice for each. If using more than two remote controls, program each so that the total adds up to four.

WARNING: The Garage Door Interface may ONLY be used to switch DC voltages of up to 12 volts. DO NOT connect any of the receiver's outputs to 110V AC!

