

Responder LE Models
Viper 5301
Clifford 1.3X
Python 580
Keyless Entry and Remote Start
Installation Guide

This product is intended for installation by a professional installer only! Attempts to install this product by a person other than a trained professional may result in severe damage to a vehicle's electrical system and components.

Directed[®]
E L E C T R O N I C S

© 2009 Directed Electronics, Vista, CA
N4202 2009-09

Bitwriter®, Code Hopping™, Doubleguard®, ESP™, Fail-Safe®, Ghost Switch™, Learn Routine™, Nite-Lite®, Nuisance Prevention® Circuitry, Revenger®, Silent Mode™, Soft Chirp®, Stinger®, Valet®, Vehicle Recovery System®, VRS®, and Warn Away® are all Trademarks or Registered Trademarks of Direct Electronics.



The Bitwriter® (p/n 998U) requires chip version 2.7 or newer to program this unit.

Bitwriters with a date code of 6a or older require an IC upgrade (p/n 998M). Some bitwriters with a date code of 6B do not require the IC upgrade, refer to tech tip # 1112 for more information.



Contents

Warning! safety first	4
Wiring Diagram	5
Wiring Connections	6
Main Harness (H1), 12-pin connector	6
H2 Harness, 18-pin connector	6
Remote Start, (H3) 8-pin connector	7
Door Lock, 3-pin connector	7
Initializing Virtual Tach (not needed w/hardwire tach inputs)	7
Learning the Tach (not needed with Virtual Tach)	7
Neutral safety switch interface	7
Testing the neutral safety switch	8
Remote Start Shutdown/Startup Diagnostics	8
Remote Pairing	9
Programming System Features	10
Feature Menus	11
Menu 1 - Vehicle integration	11
Menu 2 - Convenience	13
Menu 3 - Remote start	15
Bitwriter - Only Options	17
Basic Remote Functions	19
Reset and Deletion	19
Troubleshooting: Keyless Entry	20
Troubleshooting: Remote Start	20

Warning! safety first



The following safety warnings must be observed at all times:

- Due to the complexity of this system, installation of this product must only be performed by an authorized Directed Electronics dealer.
- When properly installed, this system can start the vehicle via a command signal from the remote control. Therefore, never operate the system in an area that does not have adequate ventilation.

The following precautions are the sole responsibility of the user; however, authorized Directed Electronics dealers should:

- Never use a test light or logic probe when installing this unit. Always use a multimeter.
- Never operate the system in an enclosed or partially enclosed area without ventilation (such as a garage).
- When parking in an enclosed or partially enclosed area or when having the vehicle serviced, the remote start system must be disabled using the installed toggle switch. It is the user's sole responsibility to properly handle and keep out of reach from children all remote controls to assure that the system does not unintentionally remote start the vehicle.
- **USER MUST INSTALL A CARBON MONOXIDE DETECTOR IN OR ABOUT THE LIVING AREA ADJACENT TO THE VEHICLE. ALL DOORS LEADING FROM ADJACENT LIVING AREAS TO THE ENCLOSED OR PARTIALLY ENCLOSED VEHICLE STORAGE AREA MUST REMAIN CLOSED AT ALL TIMES.**

Use of this product in a manner contrary to its intended mode of operation may result in property damage, personal injury, or death. Except when performing the Safety Check outlined in this installation guide, (1) Never remotely start the vehicle with the vehicle in gear, and (2) Never remotely start the vehicle with the keys in the ignition. The user is responsible for having the neutral safety feature of the vehicle periodically checked, wherein the vehicle must not remotely start while the car is in gear. This testing should be performed by an authorized Directed Electronics dealer in accordance with the Safety Check outlined in this product installation guide. If the vehicle starts in gear, cease remote start operation immediately and consult with the user to fix the problem immediately.


After the remote start module has been installed, test the remote start module in accordance with the Safety Check outlined in this installation guide. If the vehicle starts when performing the Neutral Safety Shutdown Circuit test, the remote start unit has not been properly installed. The remote start module must be removed or properly reinstalled so that the vehicle does not start in gear. All installations must be performed by an authorized Directed Electronics dealer.

OPERATION OF THE REMOTE START MODULE IF THE VEHICLE STARTS IN GEAR IS CONTRARY TO ITS INTENDED MODE OF OPERATION. OPERATING THE REMOTE START SYSTEM UNDER THESE CONDITIONS MAY RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY. IMMEDIATELY CEASE THE USE OF THE UNIT AND REPAIR OR DISCONNECT THE INSTALLED REMOTE START MODULE. DIRECTED ELECTRONICS WILL NOT BE HELD RESPONSIBLE OR PAY FOR INSTALLATION OR REINSTALLATION COSTS.


Remote starters for manual transmission pose significant risks if not properly installed and operated. When testing to ensure the installation is working properly, only remote start the vehicle in neutral gear, on a flat surface and with a functional, fully engaged parking brake. Do not allow anyone to stand in front of or behind the vehicle.

This product should **not** be installed in any convertible vehicles, soft or hard top with a manual transmission. Installation in such vehicles may pose certain risk.

Wiring Diagram

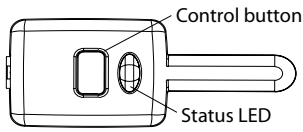

Control Center 6211T

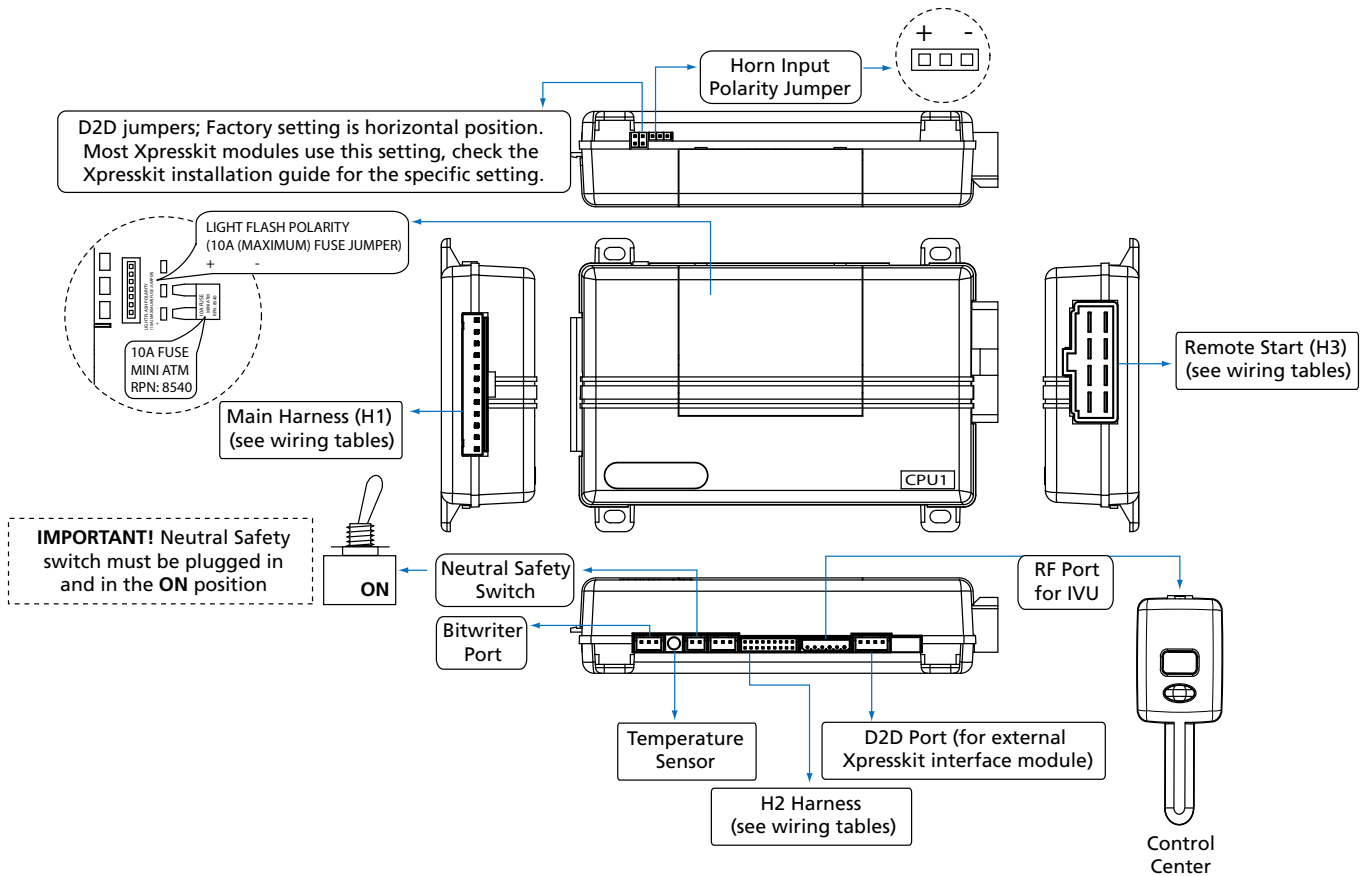

Wiring Connections

Main Harness (H1), 12-pin connector




H1/1	RED/WHITE	(-) 200mA AUX/TRUNK RELEASE OUTPUT
H1/2	RED	(+) 12VDC CONSTANT INPUT
H1/3	BROWN	(-) 200mA HORN HONK OUTPUT
H1/4	WHITE/BROWN	PARKING LIGHT ISOLATION WIRE - PIN 87a of onboard relay
H1/5	BLACK	(-) CHASSIS GROUND
H1/6	VIOLET	(+) DOOR TRIGGER INPUT
H1/7	BLUE*	FACTORY HORN INPUT (Use jumper to set polarity)
H1/8	GREEN	(-) DOOR TRIGGER INPUT (N/C** OR N/O)
H1/9	BLACK/WHITE	(-) 200mA DOME LIGHT SUPERVISION OUTPUT
H1/10	WHITE/BLUE	(-) REMOTE START/ TURBO TIMER ACTIVATION INPUT
H1/11	WHITE	PARKING LIGHT OUTPUT
H1/12	ORANGE	(-) 500mA GROUND WHEN LOCKED OUTPUT

* This optional input can be connected to the horn circuit (+ or -). When this wire receives an input for a minimum of .5 seconds, the system reports a trigger on the 2way remote. This is useful on vehicles that have a factory security system that can be armed/disarmed with our system. The system will not report that a zone has been triggered when unlocking with the remote and is not available with the 1-way remote.


** The Normally Closed setting will only work if one of the vehicle's doors is connected. If more than one door is to be monitored, then it is recommended to use the Xpresskit DTIMAZDA or tech tip # 1921 on www.directechs.com to interface with these types of vehicles.

H2 Harness, 18-pin connector



H2/1	LIGHT GREEN/BLACK	(-) 200mA OEM ALARM DISARM OUTPUT
H2/2	ORANGE/BLACK	(-) 200mA AUX 4 OUTPUT
H2/3	GREEN/WHITE	(-) 200mA OEM ALARM ARM OUTPUT
H2/4	VIOLET/BLACK	(-) 200mA AUX 2 OUTPUT
H2/5	WHITE/BLACK	(-) 200mA AUX 3 OUTPUT
H2/6	WHITE/VIOLET	(-) 200mA AUX 1 OUTPUT
H2/7	GREY/BLACK	(-) DIESEL WAIT TO START INPUT
H2/8	N/A	
H2/9	VIOLET/WHITE	TACHOMETER INPUT
H2/10	DARK BLUE	(-) 200mA STATUS OUTPUT
H2/11	PINK/WHITE	(-) 200mA FLEX RELAY CONTROL OUTPUT
H2/12	ORANGE	(-) 200mA ACCESSORY OUTPUT
H2/13	PURPLE	(-) 200mA STARTER OUTPUT
H2/14	PINK	(-) 200mA IGNITION 1 OUTPUT
H2/15	GREY	(-) HOOD PIN INPUT (N/C OR N/O)
H2/16	BLUE/WHITE	(-) 200mA 2ND STATUS /REAR DEFOGGER OUTPUT
H2/17	BROWN	(+) BRAKE SHUTDOWN INPUT
H2/18	BLACK/WHITE	(-) NEUTRAL SAFETY INPUT

Remote Start, (H3) 8-pin connector



H3/1	PINK	(+) IGNITION 1 INPUT/OUTPUT
H3/2	RED/WHITE	+12V FUSED (30A) IGNITION 2/FLEX RELAY INPUT
H3/3	ORANGE	(+) ACCESSORY OUTPUT
H3/4	VIOLET	(+) STARTER OUTPUT
H3/5	RED	+12V FUSED (30A) IGNITION 1 INPUT
H3/6	PINK/WHITE	IGNITION 2/FLEX RELAY OUTPUT
H3/7	PINK/BLACK	FLEX RELAY INPUT 87a (IF REQUIRED) OF FLEX RELAY
H3/8	RED/BLACK	+12V FUSED (30A) ACCESSORY/STARTER INPUT

Door Lock, 3-pin connector



1	BLUE	(-) 500mA UNLOCK OUTPUT
2	EMPTY	NOT USED
3	GREEN	(-) 500mA LOCK OUTPUT

Initializing Virtual Tach (not needed w/hardwire tach inputs)

To program Virtual Tach:

1. After the install is complete, remote start the engine. The programming operation may require 3 cranks of the starter before the engine starts and runs. Do not turn off the remote start if this happens, it is a normal programming operation.
2. Once the engine begins running, let it run for at least 30 seconds.
3. Using the Remote, send the Remote start command to turn remote start off. Virtual Tach is programmed. To reset Virtual Tach, go into the *Reset and Deletion* section of this guide. Virtual Tach cannot be reset with the Bitwriter.

Note: Virtual Tach cannot be used in MTS Manual Transmission Mode. It is also not recommended for diesel trucks.

Virtual Tach handles disengaging the starter motor during remote starting – it does not address over-rev. If the customer wants to have the over-rev protection capability, the tach wire must be connected.

Important: After successfully learning Virtual Tach, a small minority of vehicle starters may over crank or under crank during remote start. The Bitwriter can be used fine tune the starter output time in 50mS increments to compensate for such an occurrence.

Learning the Tach (not needed with Virtual Tach)

To learn the tach signal:

1. Start the vehicle with the key. Within 5 seconds, press and hold the Control button.
2. After 3 seconds the status LED on your Control Center lights constant when the tach signal is learned.
3. Release the Control button.

Note: When the tachometer is programmed, the main unit automatically enters the Tachometer engine checking mode.

Neutral safety switch interface

Some vehicles do not have an electrical neutral safety switch. Instead, the vehicle has a mechanical neutral safety switch that physically interrupts the starter wire and is used when the vehicle is in any drive gear. If the

remote start is interfaced before this switch, it will provide protection from starting in gear. However, some vehicles combine the column shift mechanism and the mechanical neutral safety switch into one mechanical part.

Important: You must complete the remote start system installation before doing the following test. Ensure that the remote start system is functioning normally. This includes connecting to the brake as a shut-down.

Testing the neutral safety switch

1. Make sure there is adequate clearance to the front and rear of the vehicle because it may move slightly.
2. Make sure the hood is closed and there are no remote start shut-downs active.
3. Set the emergency brake.
4. Turn the key to the "run" position, this releases the shifter.
5. Place the car in drive (D).
6. Place your foot directly over the brake pedal, but do not depress it. Be ready to step on the brake if the starter engages.
7. Activate the remote start system.
8. If the starter engages, immediately depress the brake to shut the remote start system down. If the starter does not engage, no additional safety system is required.

If the starter engages and the vehicle is a General Motors product or Dodge Dakota pickup, refer to www.directechs.com for Document 1008 under the Resource tab. For an alternative shut-down method which prevents the starter from engaging. If the vehicle is not a General Motors product or a Dodge Dakota pickup, please call Directed Electronics Technical Support for an alternative shut-down method. Do not return the vehicle to the customer until this feature is properly installed!

Remote Start Shutdown/Startup Diagnostics

Shutdown diagnostics: If the remote start activates but fails to stay running, the remote start module has the ability to inform you of what may have caused the remote start failure. Before performing shutdown diagnostics it is important that you let the remote start shut off on its own i.e. let it attempt to start 3 times then shut down, if this is not done the unit will report the shutdown you used to shut off the remote start.

Note: Shutdown diagnostics does not report if the vehicles factory immobilizer is causing the problem.

To perform shutdown diagnostics:

1. With the ignition Off, press and hold the Control button (on Control Center).
2. Turn the ignition On and then back Off while holding the Control button.
3. Release the Control button.
4. Press and release the Control button. The status LED flashes to report the last shutdown for one minute or until the ignition is turned on, as shown in the following table:

Status LED Flashes	Shutdown Mode
1 flash	Runtime expired
2 flashes	Over-rev shutdown
3 flashes	Low or no RPM
4 flashes	Transmitter shutdown (or optional push button)
5 flashes	(+) Brake shutdown
6 flashes	(-) Hood shutdown
7 flashes	Timer mode/Turbo mode/Manual mode error *
8 flashes	Neutral safety shutdown
9 flashes	Low battery (voltage mode)
11 flashes	Wait-to-start input timed out

- * Timer mode error: Ignition is on or shutdown input is active when activating timer mode.
Turbo mode error: Turbo mode is programmed off, engine is not on or shutdown input is active.
Manual mode error: MTS mode not enabled.

Startup Diagnostics: If the vehicle fails to activate the remote start, the remote start module will notify you via your Responder LE 2-way remote control and will flash the parking lights on the vehicle to notify you of what caused the no-start situation.

Parking Light Flashes

5 flashes	Brake wire is active
6 flashes	Hood pin wire is active
7 flashes	Manual transmission mode is enabled and not initialized.
8 flashes	Neutral safety wire has no ground or the neutral safety switch is Off.

Remote Pairing

Prepare the vehicle system to be Paired with a new remote

1. Turn the key to the ON position.
2. Within 5 seconds press and release the Control button on the system's Control Center one time.
3. Within 5 seconds, press and hold the Control button on the Control Center. The status LED will flash one time and the horn honks and the LED flashes to confirm the vehicle is ready for remote pairing.
4. Release the Control button and proceed below.

Note: If no remote pairing results, the system will exit after 60 seconds.

Prepare the LE remote control to be Paired with the system

Remote Pair matches your LE remote to the system. Make sure the LE remote is set for the desired Car 1 (Default) or Car 2 operation for the system it will be paired with.

1. Press and hold the **f** button for 8 seconds.
Note: If Car 2 mode is on, the car select indicator will turn on at 3 seconds. Please disregard and continue to hold.
2. Wait for the Transmit LED to light solid and the remote to beep. Release the **f** button.
3. Press the **⏪** for 1 second. The transmit LED will blink 3 times and beep 3 times.
4. Within 5 seconds, press the **🔒** button.
5. The vehicle horn will honk and the LED indicators on the remote will light in sequence with sound. You have now successfully learned the remote to the vehicle remote start system.
6. Press the **f** button two times to exit learn routine on the remote. The transmit LED will turn off and exit tone will sound.

Prepare the vehicle system to be Paired with the companion or a new 1-way remote as described above.

Note: If no remote pairing results, the system will exit after 60 seconds.

Prepare the companion 1-way remote control to be Paired with the system:



Make sure the remote is set for the desired Car 1 (Default) or Car 2 operation for the system it will be paired with.



1. Press and hold the **f** button for 8 seconds.
Note: If Car 2 mode is on, ignore the Car Select beep after 3 seconds.
2. Wait for the Transmit LED to light solid and the remote to beep. Release the **f** button.
3. Press the **⏪** button for 1 second. The transmit LED will blink 3 times and beep 3 times.
4. Within 5 seconds, press the **🔒** button.
5. The vehicle horn will honk. You have now successfully learned the remote to the vehicle remote start and keyless entry system.
6. Press the **f** button two times to exit learn routine on the remote. The transmit LED will turn off and exit tone will sound.


Programming System Features

The System Features Learn Routine dictates how the unit operates. It is possible to access and change most of the feature settings using the Control button.

1. Turn the ignition on, then off.
2. Select a Menu. Press and hold the Control button. The number of LED flashes and horn honks indicates the menu number. 1 LED flash and honk indicates menu 1, 2 LED flashes and honks - menu 2 and 3 LED flashes and honks for menu 3.
3. When the desired menu LED flashes and honks are observed, release the Control button.
4. Select a Feature. Press and release the Control button the number of times corresponding to the feature you wish to change. Then press and hold one more time to select the features.
5. Program the Feature. While holding the Control button, you can program the feature using the remote control.

For features with only two options;  = option 1 while  = option 2.

For features with more than two options;  selects the options in ascending order, while  selects them in descending order.

Note: Pressing  button resets the feature to the factory default.

Once a feature is programmed:

- Other features can be programmed within the same menu
- Another menu can be selected
- The learn routine can be exited if programming is complete

To access another feature in the same menu:

1. Press and release the Control button the number of times necessary to advance from the feature you just programmed to the next one you want to program.
2. Then press the Control button once more and hold it.

To select another menu:

1. Press and hold the Control button.
2. After 3 seconds, the unit advances to the next menu and the LED flashes and the horn honks, indicating which menu has been accessed.

The learn routine exits if any of the following occurs:

- The ignition is turned On
- There is no activity for 30 seconds
- The Control button is pressed too many times

Feature Menus

Default settings are Opt. 1 (in bolder type). New features are bold with grey background.

Menu 1 - Vehicle integration

Menu Item	Feature	Opt. 1	Opt. 2	Opt. 3	Opt.4	Opt. 5+
1	System Locking Mode	Active Locking	Passive Locking	Auto Re-locking*		
2	Panic Mode	On	Ign Off only	Off		
3	Horn Function	Confirmation Honk (20 ms) & Panic	Confirmation Honk (30 ms) & Panic	Confirmation Honk (40 ms) & Panic	Confirmation Honk (50 ms) & Panic	Confirmation Honk Off - Panic Only (Pulsed)
4	Ign-controlled locks	No Ign-locking	Lock & Unlock	Lock Only	Unlock Only	
5	Door Lock Pulses	Single	Double Unlock Only	Double Lock Only	Double Lock & Unlock	
6	Door Lock output duration	0.8 sec.	3.5 sec.	0.4 sec.		
7	2nd Unlock	2nd unlock on/ign-control after first unlock	2nd unlock on/ign-control with first unlock			
8	Comfort Closure	No Comfort Closure	Comfort Closure 1	Comfort Closure 2		
9	Hood Switch Type	Normally Open	Normally closed			
10	Door Switch Type	Normally Open	Normally Closed			
11	Remote Button unlock (Ign off)**	On	Off			

* The H1/6 Violet or the H1/8 Green wire needs to be connected for this feature.

** Not available with 1 way remote.

1. System Locking mode

1. Active: the transmitter must be used to lock the system
2. Passive Locking: after exiting the vehicle the system will automatically lock the doors
3. Auto re-locking: if the vehicle is not entered after receiving a unlock command, the system will automatically re-lock the doors

2. Panic Mode

1. On: the Panic output can be activated at any time
2. Ign Off Only : the Panic output can be activated only when the ignition is off
3. Off: the Panic output is defeated

3. Horn Duration

1. - Opt 4. 20 - 50 sec: sets the horn output duration with Panic mode at 30 seconds
2. Off: turns the horn output off and with Panic mode at 60 seconds

4. Ign-controlled Locks

1. No Ign-locking: the door lock/unlock outputs will not activate when ignition is turned on/off
2. Lock & Unlock: the door lock & unlock output will activate when ignition is turned on & off
3. Lock Only: the door lock output will activate when ignition is turned on
4. Unlock Only: the door unlock output will activate when ignition is turned off

5. Door Lock Pulses

1. Single: the door lock & unlock outputs will pulse once
2. Double Unlock only: the unlock output only will pulse twice

3. Double Lock Only: the lock output only will pulse twice
 4. Double Lock & Unlock: the lock & unlock outputs will pulse twice
6. Door Lock Output Duration
 1. 0.8sec.: the door lock output pulses will be 800mS in duration
 2. 3.5sec.: the door lock pulses will be 3.5 seconds in duration
 3. 0.4 sec.: the door lock pulses will be 400mS in duration
 7. Ignition Controlled 2nd Unlock
 1. After first unlock: for Ign-controlled unlocking, the 2nd unlock will activate 800mS after the first (driver door) unlock
 2. With first unlock: for Ign-controlled unlocking, the 2nd unlock will activate at the same time as the first (driver door) unlock
 8. Comfort Closure
 1. No comfort Closure: Comfort Closure is defeated when locking
 2. Comfort Closure 1: the door lock pulse (or 2nd pulse for double pulses) will remain on for 20 seconds.
 3. Comfort Closure 2: 800mS following the end of the door lock pulse (or 2nd pulse for double pulses); the door lock output will turn on again for 20 seconds.
 9. Hood Switch Type
 1. Normally Open: for vehicles with a hood switch that rests at ground when the hood is OPEN
 2. Normally Closed: for vehicles with a hood switch that rests at ground when the hood is CLOSED
 10. Door Switch Type
 1. Normally Open: for vehicles with door switches that rest at ground when the door is OPEN
 2. Normally Closed: for vehicles with door switches that rest at ground when the door is CLOSED
 11. Remote Button Unlock (Ign off)
 1. On: a message telling the remote control to unlock the keypad is sent each time the vehicle ignition is turned off
 2. Off: no message is sent

Menu 2 - Convenience

Menu Item	Feature	Opt. 1	Opt. 2	Opt. 3	Opt.4	Opt. 5+
1	One-time Bypass	No Bypass	Bypass			
2	Override Pulse Count	1	2	3	4	5
3	Door Open Error chirp*	On	Off			
4	Ign-controlled Dome light	On	Off			
5	OEM Alarm Disarm w/Aux/trunk	On	Off			
6	OEM Alarm Disarm Output	With Unlock	Before Unlock	Remote Start Only		
7	OEM Alarm Disarm Pulses	1	2			
8	Aux 1 Output type	Validity	Latch	Latch/reset/ign	Timed	Off (5)/2nd Unlock (6)
9	Aux 1 Linking	No Linking	Link to Lock	Link to Unlock	Link to Lock/Unlock	Link to Remote Start only
10	Aux 2 Output type	Validity	Latch	Latch reset/ign	Timed	Off (5)/2nd unlock (6)
11	Aux 2 Linking	No Linking	Link to Lock	Link to Unlock	Link to Lock/Unlock	Link to Remote Start only
12	Aux 3 Output type	Validity	Latch	Latch reset/ign	Timed	Off (5)/2nd unlock (6)
13	Aux 3 Linking	No Linking	Link to Lock	Link to Unlock	Link to Lock/Unlock	Smart Key Control (Link to Remote Start Off)*
14	Aux 4 Output Type	Validity	Latch	Latch reset/ign	Timed	Off (5)/2nd Unlock (6)
15	Aux 4 Linking	No linking	Link to Lock	Link to Unlock	Link to Lock/Unlock	Link to Remote Start Only
16	Aux/Trunk Output type	Validity	Off	2nd unlock		

* The H1/6 Violet or the H1/8 Green wire needs to be connected for this feature.

1. One-time Bypass
 1. Off: One-Time Bypass is not available
 2. On: the One-Time Bypass feature will defeat Passive Locking once and, if Locked by remote control, will defeat Comfort Closure and Aux outputs linked to Locking
2. Override Pulse Count
 - 1-5: sets the number of presses (1-5) on the Control Button required to override the alarm system
3. Door Open Error chirp
 1. On: if the door trigger is active when locking, the horn will emit a honk and a message will be sent to the 2way remote control as an alert
 2. Off: an active door trigger when locking will not create an alert output
4. Ign-controlled Dome light
 1. On: the dome light output will activate when the ignition is turned off
 2. Off: the dome light output will not activate when the ignition is turned off
5. OEM Alarm Disarm w/Aux/Trunk (H2/1 wire)
 1. On: the OEM Alarm Disarm wire will pulse as programmed when the Aux/Trunk output is activated
 2. Off: the OEM Alarm Disarm wire will not pulse when the Aux/Trunk output is activated
6. OEM Alarm Disarm Output (H2/1 wire)
 1. With Unlock: the OEM Alarm Disarm wire will pulse as programmed at the same time as the unlock

- (Blue) wire
2. Before Unlock: the OEM Alarm Disarm wire will pulse as programmed before the unlock wire
 3. Remote start only: the OEM Alarm Disarm wire will pulse as programmed during remote start only
7. OEM Alarm Disarm Pulses (H2/1 wire)
 1. 1: the OEM Alarm Disarm wire will pulse once per operation
 2. 2: the OEM Alarm Disarm wire will pulse twice per operation
 8. Aux 1 Output Type (H2/6 wire)
 1. Validity: when the Aux command is received the wire will turn on and remain on until the command ceases
 2. Latch: when the Aux command is received the wire will turn on and remain on until the command is received again
 3. Latch/reset/Ignition: when the Aux command is received the wire will turn on and remain on until the command is received again or the ignition is turned on/off
 4. Timed: when the Aux command is received the wire will turn on for the programmed time duration (default 30sec)
 5. Off: the output will not activate for a remote control command, use this option when the Aux command controls an external device such as a garage door module
 6. 2nd unlock: the wire will operate as 2nd unlock and will not activate for remote control commands
 9. Aux 1 Linking
 1. No Linking: the Aux output will not activate for a remote control command
 2. Link to Lock: the Aux output will activate for the Lock command
 3. Link to Unlock: the Aux output will activate for the Unlock command
 4. Link to Lock/Unlock: the Aux output will activate for the Lock & Unlock commands
 5. Link to Remote Start: the Aux output will activate for any Remote Start activation
 10. Aux 2 Output Type
 - Refer to Aux 1 Output Type descriptions
 11. Aux 2 Linking
 - Refer to Aux 1 Linking descriptions
 12. Aux 3 Output Type
 - Refer to Aux 1 Output Type descriptions
 13. Aux 3 Linking
 - Options 1-4: Refer to Aux 1 Linking descriptions
 - Option 5: SmartKey Control (Link to Remote Start Off): The Aux output will pulse once following Remote Start shut down for vehicles with push button engine stop operations. During runtime, if any door is opened remote start will shut down immediately and pulse the output.
 14. Aux 4 Output Type
 - Refer to Aux 1 Output Type descriptions
 15. Aux 4 Linking
 - Refer to Aux 1 Linking descriptions
 16. Aux/Trunk Output Type
 - Refer to Aux 1 Output Type descriptions

Menu 3 - Remote start

Menu Item	Feature	Opt. 1	Opt. 2	Opt. 3	Opt.4	Opt. 5+
1	Transmission Mode	Manual*	Automatic			
2	Engine Checking Mode	Virtual Tach	Voltage	Off	Tachometer	
3	Cranking Time	0.6 sec.	0.8 sec.	1.0 sec.	1.2 sec.	1.4 (5)/ 1.6 (6)/ 1.8 (7) 2.0 (8)/ 4.0 (9)
4	Remote Start Runtime	12 min.	24 min.	60 min.		
5	Activation Pulse Count	1	2			
6	Turbo Mode	No Turbo Mode	On-1 min.	On-3 min.	On-5 min.	On- 10 min.
7	Timer Mode Runtime	12 min.	3 min.	6 min.	9 min.	
8	Flex Relay Function	Ignition 2	Accessory 2	Starter 2		
9	Diesel Start Delay	Wait-to Start input	Timed 15 sec.	Timed 30 sec.	Timed 45 sec.	
10	Accessory during Diesel Start Delay	On	Off			
11	Status 2 Output	Status	Latch Rear Defogger	Pulse Rear Defogger		
12	Parking Light Output	Constant	Pulsed	Off		
13	Anti-grind Output	On	Off			
14	Tach Mode Starter Release	Normal	Increase	Decrease		
15	Vehicle Temp Auto Report**	Off	On			
16	Remote Start Safelock	Off	On			

* The H1/6 Violet or the H1/8 Green wire needs to be connected for this feature.

** Not available with 1 way remote.

1. Transmission Mode

1. Manual: requires 'Tachometer' for the Engine Checking Mode, and requires the user to successfully perform a procedure when parking the vehicle before remote starter will engage
2. Automatic: uses any of the Engine Checking Modes and does not require any special procedures when parking

2. Engine Checking Mode

1. VirtualTach: battery voltage drop/rise during cranking determines when the starter output is released. During runtime, constant voltage level is monitored to determine if the engine is running
2. Voltage: starter output during cranking is a programmed duration (Set in Cranking Time). During runtime, constant voltage level is monitored to determine if the engine is running
3. Off: starter output during cranking is a programmed duration (Set in Cranking Time). The remote start will keep the ignition/accessories active for the programmed runtime whether the engine is running or not
4. Tachometer: tachometer input signal during cranking and runtime to determine when the starter output is released and if the engine is running.

3. Cranking Time

- 0.6/0.8/1.0/1.2/1.4/1.6/1.8/2.0/4.0 seconds: determines the starter output duration during cranking for the 'Voltage' and the 'Off' Engine Checking Mode options

4. Remote Start Runtime

- 12/24/60 minutes: sets engine runtime during normal remote start operations

5. Activation Pulse Count

- 1/ 2 pulses: sets the number of remote control commands received or Activation Input required to

activate and de-activate remote start

6. Turbo Mode
 1. No turbo Mode: Turbo mode is not available
 2. On – 1/3/5/10 minutes: Turbo Mode is available and, when activated, the engine will run for the duration set per the selected option
7. Timer Mode Runtime
 - 12/3/6/9 minutes: sets the runtime when the engine is started by the Timer Mode and SmartStart features
8. Flex Relay Function
 1. Ignition 2: the relay will emulate the Ignition 1 output during remote start
 2. Accessory 2: the relay will emulate the Accessory 1 output during remote start
 3. Starter 2: the relay will emulate the Starter output during remote start
9. Diesel Start Delay
 1. Wait-to-start input: (-) input on the Grey/black (H2/7) WTS wire will delay the starter output until the ground ceases.
 2. Timed 15/30/45 seconds: delays the starter output per the selected option, the WTS wire does not function.
10. Accessory during Diesel Start Delay
 1. On: the Accessory outputs (H/3 high current and H2/12 low current) will be ON during diesel start delay
 2. Off: the Accessory outputs (H/3 high current and H2/12 low current) will be OFF during diesel start delay
11. Status 2 Output (Dark Blue H2/10 wire)
 1. Status: the output will activate before the ignition outputs turn on, and de-activate after they turn off during remote start
 2. Latch rear defogger: the output activates 10 seconds after start if the interior temperature is below 55F. It turns off after 10 minutes or upon remote start off
 3. Pulse rear defogger: the output activates (for 800mS) 10 seconds after start if the interior temperature is below 55F.
12. Parking Light Output
 1. Constant: the lights will turn on solid during remote start
 2. Pulsed: the lights will pulse on/off during remote start
 3. Off: the lights will be off during remote start
13. Anti-grind Output
 1. On: the high current starter relay will be activated during remote start as anti-grind protection.
 2. Off: the high current starter relay will not be activated during remote start, no anti-grind protection is available.
14. Tach Mode Starter Release
 1. Normal: the starter output will release normally during cranking (50% of the learned tachometer value)
 2. Increase: the starter output will release later during cranking (at 35% of the learned tachometer value)
 3. Decrease: the starter output will release sooner during cranking (at 35% of the learned tachometer value)
15. Vehicle Temp Auto Report
 1. Off: the report during remote start is defeated
 2. On: the report is sent every 2 minutes during remote start if the temperature has changed (+/-) 1 degree since the last report


16. Remote start Safelock

1. Off: the Door lock and Factory Alarm Re-arm outputs will maintain the current status (locked/unlocked) during remote start and after shut down
2. On: the Door lock and Factory Alarm Re-arm outputs will arm/lock the vehicle during remote start and after shutdown

Bitwriter - Only Options



If programming with the Bitwriter®, the learn routine can be locked or unlocked. If the learn routine has previously been locked, it must be unlocked with Bitwriter® - this cannot be done manually with the Control button.

The Bitwriter®  gives you access to a wider range of system options. These features and the adjustments that may be programmed are described in the table below.

Menu Item	Feature	Default	Opt. 2	Opt. 3	Opt.4	Opt. 5+
1	Aux/Trunk Icon Type*	Trunk	Window	Sunroof	Audio	Lights/Left dr/Right dr/Rear Hatch
2	Aux 1 Timed Output	30 sec.	Options: 1 to 90 sec.			
3	Aux 1 Icon Type*	Pulsed	Trunk	Window	Sunroof	Audio/Lights/Left dr/Right dr/Rear Hatch/Timed/Latched
4	Aux 2 Timed Output	30 sec.	Options: 1 to 90 sec.			
5	Aux 2 Icon Type*	Pulsed	Trunk	Window	Sunroof	Audio/Lights/Left dr/Right dr/Rear Hatch/Timed/Latched
6	Aux 3 Timed Output	30 sec.	Options: 1 to 90 sec.			
7	Aux 3 Icon Type*	Pulsed	Trunk	Window	Sunroof	Audio/Lights/Left dr/Right dr/Rear Hatch/Timed/Latched
8	Aux 4 Timed Output	30 sec.	Options: 1 to 90 sec.			
9	Diesel Start Delay type (seconds)	15 sec.	Options: 1 to 90 sec.			
10	Timer Mode Runtime (minutes)	12 min.	Options: 1 to 16 min.			
11	Timer Mode Starts	6 starts	Options: 1/2/3/4 to 24 (Starts) in increments of 2			
12	Timer mode intervals (hours)	3 hr.	Options: 1/2/ 3 /4 to 24 in 2 hour increments			
13	Smart start low temp	0° (F)	Options: OFF, -20° to 70° in 10° increments			
14	Smart start high temp	100° (F)	Options: OFF, 40° to 130° in 10° increments			
15	Smart start low battery (volts)	10.5V	Options: OFF, 9V to 12.5V in 0.5V increments			
16	Starter Release Fine Tune	6 (normal)	Options: 0 to 20 in increments of 1			
17	Feature Programming	Unlocked	Locked			
18	Transmitter Programming	Unlocked	Locked			
19	Remote Start Runtime	12 min.	Options: 1 to 60 min.			
20	Virtual Tach Fine Tune	Not Initialized	Options: Not initialized, 0 to 1000 in 50 millisecond increments			

* Not available on the LE 2-way or 1-way remote

1. Aux/Trunk Icon Type: sets the name to be displayed in the Text Field when the Aux/Trunk output is activated/de-activated
2. Aux 1 Timed Output: sets the output duration in 1 second intervals up to 90 seconds for Aux 1
3. Aux 1 Icon Type: sets the name to be displayed in the Text Field when the Aux 1 output is activated/de-activated
4. Aux 2 Timed Output: sets the Aux 2 "Timed" output in 1 second intervals up to 90 seconds
5. Aux 2 Icon Type: sets the name to be displayed in the Text Field when the Aux 2 output is activated/de-activated
6. Aux 3 Timed Output: sets the Aux 3 "Timed" output in 1 second intervals up to 90 seconds
7. Aux 3 Icon Type: sets the name to be displayed in the Text Field when the Aux 3 output is activated/de-activated
8. Aux 4 Timed Output: sets the Aux 4 "Timed" output in 1 second intervals up to 90 seconds
9. Diesel Start Delay Timer: sets the delay before engine crank in 1 second intervals up to 90 seconds for diesel engine vehicles
10. Timer Mode Runtime: sets the duration of runtime when the engine is started by the Timer Mode and Smart Start features
11. Timer mode Starts: sets the number of times the engine will be started by the Timer Mode and Smart Start features
12. Timer mode Intervals: sets the number of hours between engine starts by the Timer Mode and Smart Start features
13. Smart Start Low Temperature: sets the low temperature threshold required for Smart Start to start the engine
14. Smart Start High Temperature: sets the high temperature threshold required for Smart Start to start the engine
15. Smart Start Low battery (Volts): sets the low battery level threshold required for Smart Start to start the engine
16. Starter Release Fine Tune: adds or subtracts crank time in Tachometer mode in order to overcome engine types that short crank or over-crank on the first start attempt
17. Feature Programming: locks and unlocks the user's ability to enter the feature menus and manually change the main unit programming using the Control Center
18. Transmitter Programming: locks and unlocks the user's ability to enter the remote control/Reset menu and manually change any functions using the Control Center
19. Remote Start Runtime: sets the duration of runtime when the engine is started by remote command
20. VirtualTach Fine tune: adds or subtracts crank time in VirtualTach mode in order to overcome engine types that short crank or over-crank on the first start attempt

Basic Remote Functions

See Owner's guide for functionality details on both the LE and 1-way companion remote control.

Reset and Deletion

If a feature/virtual tach needs to be reset or the remote controls need to be deleted, use the following procedure.

1. Turn the ignition to the ON position (The heavy gauge pink wire must be connected).
2. Within 10 seconds, press and release the Control button: 2 times if you want to delete remotes, 3 times to reset features or 4 times to reset virtual tach.. These function steps are described next.

Step 2:

Delete remotes: This feature erases all remotes from the memory of the keyless entry system. This is useful in cases when a customer's remote is lost or stolen.

Note: This does not reset the programmed features of the keyless entry system or reset the Virtual Tach setting.

Step 3:


Reset Features: This resets all features of the keyless entry system to the factory default settings.

Note: This feature does not delete the remotes from the keyless entry system or reset the Virtual Tach setting

Step 4:

Virtual Tach Reset: Deletes all previously learned values for Virtual Tach, and on the next remote start sequence the unit begins virtual tach initialization.

Note: The "Zap" feature on the Bitwriter does not reset the Virtual tach setting.

3. Once you have selected the function step, press the Control button once more and hold it. The LED flashes and the horn honks to confirm the selected functional step. Do not release the Control button
4. While holding the control button, press the  button on the remote control. The unit honks to confirm that the feature has been successfully reset.

Once the feature is reset, the Control button can be released.

Troubleshooting: Keyless Entry

System does not Auto re-lock:

1. Is Auto re-locking programmed ON?
2. Are the door inputs connected? Either the H1/8 green or the H1/6 violet should be connected.

Door locks operate backwards.

- This unit has easily-reversed lock/unlock outputs. Recheck wire connections to see if you have reversed these.

Troubleshooting: Remote Start

The remote will not activate the remote start

1. Check remote startup diagnostics.
2. Is the neutral safety switch plugged in and turned on?
3. If the vehicle has an automatic transmission, make sure the remote start is programmed for Automatic Transmission mode.
4. Is the remote programmed to the system?
5. Can the remote start be activated manually by applying a ground pulse to the H1/10 White/Blue wire?
6. Check the harnesses and their connections. Make sure that the harnesses are completely plugged into the remote start module. Make sure there are good connections to the vehicle wiring.
7. Check voltage and fuses on the main 12-pin harness and on the heavy gauge remote start harness.

The remote start will activate, but the starter never engages.

1. Check for voltage on the purple starter wire two seconds after the remote start becomes active. If there is voltage present, skip to Step 8. If there is not voltage present, advance to Step 2.
2. Check the 30A fuses.
3. If the gray/black wait-to-start wire is detecting ground upon activation, the starter will not crank.
4. Is the tach wire connected? If so disconnect it and remote start the vehicle to see if the purple wire sends out voltage. If you get voltage you will need to go to an alternate tach source, the tach wire you are currently on has a voltage spike upon ignition power up which can cause the remote start to not send out the crank voltage.
5. Is the vehicle a Chrysler or GM with a multiplexed starter wire? The vehicle will not crank if the resistance is incorrect on the multiplexed accessory/starter wire.
6. Is the vehicle a GM? If so the Brown 2nd accessory needs to be powered up on some of the vehicles for the vehicle to crank.
7. If this is a manual transmission vehicle, the clutch will need to be bypassed (see tech tip # 10000 at www.directechs.com)
8. Make sure the purple starter wire is connected on the starter side of the optional starter kill/anti-grind relay.
9. Does the vehicle have an immobilizer? Some immobilizer systems will not allow the vehicle to crank if active.
10. Check connections. The heavy gauge remote start input wires on the heavy gauge 10-pin connector should have a solid connection. "T-taps" or "scotch locks".

The vehicle starts, but immediately dies.

1. Does the vehicle have an immobilizer? The vehicle's immobilizer can cut the fuel and/or spark during unauthorized starting attempts.
2. Is the remote start programmed for virtual tach or voltage sense? If so, the crank time may not be set high enough. Voltage sense will not work on some vehicles.
3. Is the remote start in tach mode? If so has the tach been programmed to the system?
4. Check diagnostics. Sometimes a shutdown will become active during cranking or just after cranking.

The vehicle starts, but the starter keeps running.

1. Is the system programmed for engine checking off or virtual tach voltage sense? When programmed for either of these features, the engine cranks for the pre programmed crank time regardless of how long it takes for the vehicle to actually start. Adjust to a lower cranking time.
2. Was the Tach Learn successful? The LED must light solid and bright to indicate a successful learn.
3. Make sure that there is a tach signal at the purple/white tach input wire of the remote start. If there is not a tach signal, recheck the connection to the vehicle's tach wire and make sure the wire is not broken or shorted to ground leading to the remote start.
4. Is an ignition or accessory output wire connected to the starter wire of the vehicle? Verify the color of the starter wire in the vehicle and confirm that an ignition or an accessory output is not connected to that wire.

The vehicle starts, but will only run for 10 seconds

1. Is the remote start programmed for voltage sense? If this does not work, a tach wire should be used.
2. Check shutdown diagnostics.

The climate control system does not work while the unit is operating the vehicle.

1. Either the wrong accessory wire is being energized or more than one ignition or accessory wire must be energized in order to operate the climate control system.
2. If the vehicle has an electronic climate control system some will reset when the key is turned off and then back on, unfortunately this is a function of the vehicle and cannot be bypassed.

MTS - Manual Transmission Start diagnostics

When enabling MTS, if you get a failure notification from the remote or the vehicle fails to remain started check for following:

- Tachometer not connected or programmed.
- E-brake not connected to the remote start unit. The black/white H2/18 neutral safety wire must have a ground when the parking brake is set.
- Foot must be off the brake when activating the MTS mode on the remote.
- Is the door open when enabling the MTS mode? If so this would cause the unit to enter Pit Stop Mode and the remote start will continue to run when arming/locking the system.
- Is the door input connected? The system needs to see a door open then close after initiating the remote start.
- Does the vehicle have a delayed dome light? If you are connected to the dome light wire and the dome light is staying on after arming/locking the system, the system can exit the MTS mode.
- Make sure the neutral safety switch is plugged in and turned on.

MTS mode exiting diagnostics:

If the remote start has entered the MTS mode but exits the mode after the system is armed/locked. Check these for possible causes.

- The vehicle door has been opened in your absence.
- Does the vehicle have a delayed dome light circuit or does the dome light come on when the ignition is shut off? If so you may need to go to the independent door inputs of the vehicle.
- If you are connected to the dome light wire in the vehicle and cannot connect the system to the individual door inputs of the vehicle due to it having normally closed door inputs, you can use the Xpresskit DTIMAZDA module or Tech Tip # 1921 at www.directechs.com to interface with these types of circuits.
- The E-brake wire connected to the neutral safety input of the system loses ground when ignition is turned off or after a certain amount of time, with these vehicles unfortunately there is no work-

around.

- The E-brake wire connected to the neutral safety input of the system has a poor ground. Clean the contacts on the switch or replace the switch.